


BA01.45-P-1000-01E	Oil pan				
--------------------	---------	--	--	--	-----------------------------------------------------------------------------------

Engine 152, 157, 276, 278

Oil pan

Number	Designation			Engine 152	Engine 157	
BA01.45-P-1001-01E	Screw/bolt, oil pan to crankcase/ timing case cover/rear end cover	M6	Nm	11	9	
BA01.45-P-1002-01E	Bolt, oil pan to crankcase	M8	Nm	20	20	
BA01.45-P-1003-01E	Bolt, oil pan bottom section to oil pan		Nm	14	14	
BA01.45-P-1004-01E	Screw/bolt, guide tube to oil pan		Nm	5	5	
BA01.45-P-1005-01E	Screw/bolt, guide tube to cylinder head/cylinder head cover/front cover		Nm	9	5	
BA01.45-P-1006-01E	Screw plug to oil pan	M26	Nm	-	20	
BA01.45-P-1007-01E	Drain plug at oil pan/oil pan bottom section	Metal	M12	Nm	-	20
			M14	Nm	30	30
		Plastic		Nm	-	4
BA01.45-P-1008-01E	Screw/bolt, front axle gear support brace to oil pan	M12	Nm	-	60	
BA01.45-P-1009-01E	Screw/bolt, cover panel to oil pan	M6	Nm	11	-	
BA01.45-P-1010-01E	Bolt, transmission to oil pan	M10	Nm	39	39	

Oil pan

Number	Designation			Engine 276	Engine 278	
BA01.45-P-1001-01E	Screw/bolt, oil pan to crankcase/ timing case cover/rear end cover	M6	Nm	9	9	
BA01.45-P-1002-01E	Bolt, oil pan to crankcase	M8	Nm	20	20	
BA01.45-P-1003-01E	Bolt, oil pan bottom section to oil pan		Nm	14	14	
BA01.45-P-1004-01E	Screw/bolt, guide tube to oil pan		Nm	5	5	
BA01.45-P-1005-01E	Screw/bolt, guide tube to cylinder head/cylinder head cover/front cover		Nm	5	5	
BA01.45-P-1006-01E	Screw plug to oil pan	M26	Nm	20	20	
BA01.45-P-1007-01E	Drain plug at oil pan/oil pan bottom section	Metal	M12	Nm	30	20
			M14	Nm	30	30
		Plastic		Nm	Anzug bis Rastnase anschlägt	4
BA01.45-P-1008-01E	Screw/bolt, front axle gear support brace to oil pan	M12	Nm	60	60	
BA01.45-P-1009-01E	Screw/bolt, cover panel to oil pan	M6	Nm	-	-	
BA01.45-P-1010-01E	Bolt, transmission to oil pan	M10	Nm	39	39	