
## MODEL 166, 292

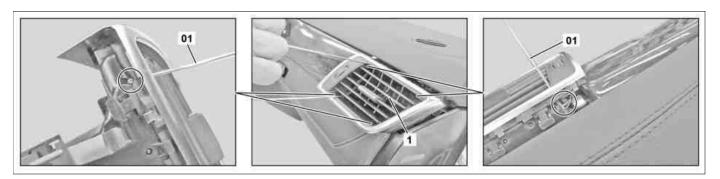


P68.10-4430-07

## Shown on side air vent on MODEL 166

## 01 Extraction hook

## 1 Side air vent

XX	Remove/install		
1	Position extraction hooks (01) at side air vent (1)	<b>i</b> Extraction hooks (01) should be located in the front mounts (circle).	
			*140589023300
2	Pull side air vent (1) out of instrument panel	i Installation: Ensure that side air vent (1) arrests correctly.	
3	Unclip electrical connector and disconnect	MODEL 292	
4	Install in the reverse order		

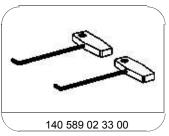

Extraction hook