







	Remove/install		
 Danger!	Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof.	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1	Wind crank window fully down		
2	Loosen window frame paneling (2) with assembly wedge (12) until expansion clip (3) is accessible.		*110589035900
3	Remove expansion clip (3).	 Pull pin (4) out of expansion clip (3) with suitable pliers. Then turn pin (4) 90° and press expansion clip (3) in again until it arrests. Then hold expansion clip (3) with pliers on pin (4) and pull out of door lining (1).	
4	Remove bolts (5)		
5	Unclip door lining on mounting clips (6) from front door (7).	 Move mounting wedge (12) directly to fastening clips (6) and ensure that the retaining tabs on the fastening clip (6) do not tear out of the door lining (1). 	*110589035900
6	Horizontally loosen door lining (1) to side from front door (7). Guide lock button (8) out of door lining (1).	 Loosen door lining (1) from front door (7) until electrical connectors (10) on left front door control unit (N69/1) or right front door control unit (N69/2) and inside door opener Bowden cable (9) are accessible.  Installation: Ensure that door lining (1) is seated correctly in inner sealing frame.	
7	Disconnect electrical connectors (10) from left front door control unit (N69/1) or right front door control unit (N69/2)  Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
8	Unhook inside door opener Bowden cable (9) from inner door handle (11).		
9	Install in the reverse order		