

Service at 40,000 miles or 4 years

Required Service Work

	C-Class	CL-Class	CLS-Class	E-Class	G-Class	GL-Class	GLK-Class	M-Class	R-Class	S-Class	SL-Class	SLK-Class
Engine - oil and filter change	•	•	•	•	•	•	•	•	•	•	•	•
Check catch, safety catch and hinges on engine hood for proper operation	•	•	•	•	•	•	•	•	•	•	•	•
Check condition of poly-V-belt (except ML 450 Hybrid and S 400 Hybrid)	•	•	•	•	•	•	•	•	•	•	•	•
Replace fuel filter (engine 642)				•		•		•	•			
Clean water drain in air/water duct				•		•		•	•			
AdBlue® evacuate and fill up (engine 642)				•		•		•	•			
Reset maintenance service indicator in instrument cluster	•	•	•	•	•	•	•	•	•	•	•	•
Replace brake fluid	•	•	•	•	•	•	•	•	•	•	•	•
Replace combination or dust filter	•	•	•	•	•	•	•	•	•	•	•	•
Check thickness of brake pads, front and rear	•	•	•	•		•	•	•	•	•	•	•
Check thickness, condition of front and rear brake pads and discs					•							
Correct tire inflation pressure	•	•	•	•	•	•	•	•	•	•	•	•
Correct inflation pressure in spare tire (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•
Leakage - Major components Check for chafe marks, line routing, damaged components. In the event of leakage, determine cause and perform repair with separate work order	•	•	•	•	•	•	•	•	•	•	•	•

**Warning!**

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

	C-Class	CL-Class	CLS-Class	E-Class	G-Class	GL-Class	GLK-Class	M-Class	R-Class	S-Class	SL-Class	SLK-Class
Check AdBlue® lines and components for leaks and damage (engine 642)				•		•		•	•			
Visually inspect condition of front axle ball joints, rubber boots	•	•	•	•		•	•	•	•	•	•	•
Visually inspect condition of rear axle ball joints, rubber boots						•		•	•			
Visually inspect condition of driveshaft flexible discs	•	•	•	•			•			•	•	•
Visually inspect condition of steering mechanical components, rubber boots	•	•	•	•	•	•	•	•	•	•	•	•
Visually inspect propeller shafts, universal joints and collapsible sections					•	•		•	•			
Bolts attaching steering (check/tighten)					•							
Joint housing of AWD front axle - inspect grease packing and correct					•							
Automatic transmission - oil and filter change	•	•	•	•	•	•	•	•	•	•	•	•
Replace rear axle differential fluid (only C 63 AMG, CLS 63 AMG, E 63 AMG, SL 63 AMG with AMG Performance Package and SL 65 AMG)	•		•	•							•	
Replace air filter (except engine 275)	•	•	•	•	•	•	•	•	•	•	•	•

**Warning!**

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

	C-Class	CL-Class	CLS-Class	E-Class	G-Class	GL-Class	GLK-Class	M-Class	R-Class	S-Class	SL-Class	SLK-Class
Check the following fluid levels, correct if necessary												
If there is a loss of fluid, determine cause and perform repair with separate work order												
Engine cooling system, antifreeze and corrosion protection (engine 275 main circuit)		•								•	•	
Check coolant level	•	•	•	•	•	•	•	•	•	•	•	•
Brake system	•	•	•	•	•	•	•	•	•	•	•	•
Power steering	•	•	•	•	•	•	•	•	•	•	•	•
Windshield washer system	•	•	•	•	•	•	•	•	•	•	•	•
Active Body Control (if applicable)		•								•	•	
Differential lock mechanism fluid reservoir					•							
Transfer case					•							
Front axle					•							
Rear axle					•							
Function check												
Check parking brake (function test only)	•	•	•	•	•	•	•	•	•	•	•	•
Audible warning system (Electric-hydraulic brake system)											•	
Check Electric-hydraulic brake system hydraulic unit											•	
Differential/transfer case lock mechanisms (front, rear and center)					•							

**Warning!**

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

Recommended Service Work												
	C-Class	CL-Class	CLS-Class	E-Class	G-Class	GL-Class	GLK-Class	M-Class	R-Class	S-Class	SL-Class	SLK-Class
Replace wiper blades	•	•	•	•	•	•	•	•	•	•	•	•
Check the following fluid levels, correct if necessary												
If there is a loss of fluid, determine cause and perform repair with separate work order												
Main or starter battery		•	•							•	•	•
Electrical system checks												
Horn, high beam flasher, hazard warning flasher, turn signals	•	•	•	•	•	•	•	•	•	•	•	•
Warning/indicator lamps, illumination and interior lighting/ exterior lighting	•	•	•	•	•	•	•	•	•	•	•	•
Check trunk/cargo area lighting	•	•	•	•	•	•	•	•	•	•	•	•
Check and correct headlamp setting	•	•	•	•	•	•	•	•	•	•	•	•
Battery (main/starter/auxiliary) check condition using "Midtronics MCR 717" tester	•	•	•	•	•	•	•	•	•	•	•	•



Warning!

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

	C-Class	CL-Class	CLS-Class	E-Class	G-Class	GL-Class	GLK-Class	M-Class	R-Class	S-Class	SL-Class	SLK-Class
Visual and functional checks												
Check seat belts and buckles for signs of external damage and proper function	•	•	•	•	•	•	•	•	•	•	•	•
Check windshield washer and headlamp cleaning system	•	•	•	•	•	•	•	•	•	•	•	•
Check, clean and lubricate tilt/sliding roof mechanism (where applicable)	•	•	•	•	•	•		•	•	•		
Check, clean and lubricate panoramic roof mechanism (where applicable)	•			•			•		•	•		
Clean and lubricate soft top/retractable hard top seals											•	•
Check bodywork for paint work damage	•	•	•	•	•	•	•	•	•	•	•	•
Night View Assist camera - clean windshield behind the camera cover (where applicable)		•								•		
Lubricate door locks, including rear door					•							
Tire checks												
Tire rotation (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•
Inspect tires for damage, measure tread depth	•	•	•	•	•	•	•	•	•	•	•	•
Check TIREFIT sealant expiration date (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•
Activate Tire Pressure Monitoring System	•	•	•	•	•	•	•	•	•	•	•	•

**Warning!**

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

	C-Class	CL-Class	CLS-Class	E-Class	G-Class	GL-Class	GLK-Class	M-Class	R-Class	S-Class	SL-Class	SLK-Class
Chassis checks												
Visually check brake system components, lines, hoses, calipers	•	•	•	•		•	•	•	•	•	•	•
Check thickness of brake pads and disks, front and rear wheels removed	•	•	•	•		•	•	•	•	•	•	•
Chassis and load-bearing body components: Check for damage and corrosion	•	•	•	•	•	•	•	•	•	•	•	•



Warning!

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.