

**Document number:** pe54.21-p-2108-97faa

**Document title:** Wiring diagram / rear SAM control unit with fuse and relay module (N10/2)

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
A0	Color code key	64L
Code 218	Backup camera	34J
Code 218	Backup camera	46J
Code 218	Backup camera	59J
Code 494	USA version	15G
Code B03	ECO start/stop function	1K
E18/4	Right luggage compartment lamp	22L
E18/5	Left luggage compartment lamp	24L
E3	Left rear lamp unit	28L
E3	Left rear lamp unit	39L
E3	Left rear lamp unit	52L
E3e1	Left rear turn signal lamp	27L
E3e1	Left rear turn signal lamp	39L
E3e1	Left rear turn signal lamp	52L
E3e10	Inner left stop lamp and taillamp	40L
E3e10	Inner left stop lamp and taillamp	50L
E3e3	Left backup lamp	29L
E3e3	Left backup lamp	41L
E3e3	Left backup lamp	53L
E3e5	Left rear fog lamp	28L
E3e5	Left rear fog lamp	41L
E3e5	Left rear fog lamp	53L
E3e9	Left stop lamp and taillamp and parking lamp	26L
E3e9	Left stop lamp and taillamp and parking lamp	38L
E3e9	Left stop lamp and taillamp and parking lamp	54L
E4	Right rear lamp unit	32L
E4	Right rear lamp unit	44L
E4	Right rear lamp unit	57L
E4e1	Right rear turn signal lamp	31L
E4e1	Right rear turn signal lamp	43L
E4e1	Right rear turn signal lamp	56L
E4e10	Inner right brake light and taillight	45L
E4e10	Inner right brake light and taillight	59L
E4e3	Right backup lamp	32L
E4e3	Right backup lamp	44L
E4e3	Right backup lamp	57L
E4e5	Right rear fog lamp	33L
E4e5	Right rear fog lamp	45L
E4e5	Right rear fog lamp	57L

**Document number:** pe54.21-p-2108-97faa

**Document title:** Wiring diagram / rear SAM control unit with fuse and relay module (N10/2)

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
E4e9	Right stop lamp and taillamp and parking lamp	33L
E4e9	Right stop lamp and taillamp and parking lamp	46L
E4e9	Right stop lamp and taillamp and parking lamp	58L
E6/3	Left rear side-marker lamp	27L
E6/3	Left rear side-marker lamp	38L
E6/3	Left rear side-marker lamp	51L
E6/4	Right rear side-marker lamp	31L
E6/4	Right rear side-marker lamp	43L
E6/4	Right rear side-marker lamp	55L
M14/10	Tank cap central locking motor	20L
N10/2	Rear SAM control unit with fuse and relay module	12A
N10/2	Rear SAM control unit with fuse and relay module	4A
N10/2	Rear SAM control unit with fuse and relay module	20A
N10/2	Rear SAM control unit with fuse and relay module	29A
N10/2	Rear SAM control unit with fuse and relay module	36A
N10/2	Rear SAM control unit with fuse and relay module	44A
N10/2	Rear SAM control unit with fuse and relay module	52A
N10/2	Rear SAM control unit with fuse and relay module	58A
S88/10	Trunk lid emergency opening switch	17L
U1018	Valid for gasoline engine 276	9J
U152	Valid for gasoline engine 156	12J
U157	Valid for combustion engine 272 DE	12J
U169	Valid for gasoline engine 271 DE	12J
U240	Valid for all except ECO start/stop function	1K
U57	Valid for model 204.2	19G
U57	Valid for model 204.2	21G
U57	Valid for model 204.2	23G
U57	Valid for model 204.2	37G
U58	Valid for model 204.0	21G
U58	Valid for model 204.0	19G
U58	Valid for model 204.0	50G
U59	Valid for model 204.9	19G
U59	Valid for model 204.9	21G
U59	Valid for model 204.9	23G
U59	Valid for model 204.9	25G
U60	Valid for model 204.3	19H
U60	Valid for model 204.3	21H
U60	Valid for model 204.3	50G
U739	Valid for gasoline engine 271 continuous fuel injection system (electronic)	9J

**Document number:** pe54.21-p-2108-97faa

**Document title:** Wiring diagram / rear SAM control unit with fuse and relay module (N10/2)

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
U740	Valid for diesel engine 646	6J
U819	Valid for gasoline engine 272	9J
U880	Valid for diesel engine 642	6J
U948	Valid for diesel engine 651	6J
W18	Left front seat crossmember ground point	24H
W33/4	Fuel tank filler neck ground point	5H
W7	Right wheelhouse trunk ground point	4H
W7	Right wheelhouse trunk ground point	22H
W7	Right wheelhouse trunk ground point	17H
W7	Right wheelhouse trunk ground point	29H
W7	Right wheelhouse trunk ground point	41H
W7	Right wheelhouse trunk ground point	54H
W7/1	Right taillamp trunk ground point	3H
W7/1	Right taillamp trunk ground point	22H

