



P01.20-2237-09

Shown on engine 651.911

- 7 Electrical connectors
- 8 Electrical connector

9 Mounting clips

10 Wiring shaft

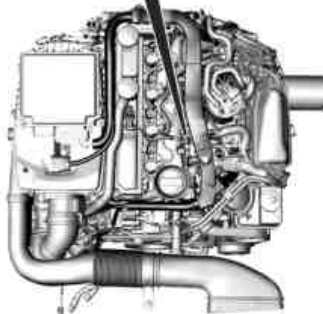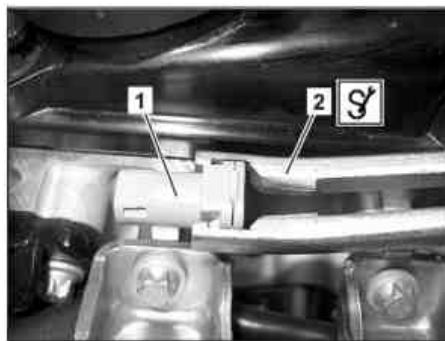

 

 
 
P15.20-2179-09

1 Electrical connectors

2 Pliers


R9 Glow plug

	Remove/install	
	Notes for ceramic glow plugs	AH15.20-P-0001-01A
1	Remove cylinder head cover trim	

2	Remove fuel filter	i Lay fuel filter with attached fuel lines to one side. Model 204 Model 166, 172, 207, 212, 218 Model 221	AP47.20-P-0780CWD AP47.20-P-0780EWD AP47.20-P-0780SXI
3	Disconnect electrical connector (8)	Except models 166, 172	
4	Disconnect electrical connectors (7)		
5	Loosen fastening clip (9) and lift cable shaft (10) upwards	i Cable holder which are separated when removing, must be fitted again at the same position when installing.	
6	Detach electrical connectors (1) from glow plugs (R9) using pliers (2)	 Pliers	*611589003700
7	Unscrew glow plugs (R9)	 If the releasing torque of the glow plugs (R9) is greater than 25 Nm, it is recommended to bring the engine up to operating temperature. The glow plugs (R9) can tear off otherwise.  Wrench socket 	*001589800900 *BA15.20-P-1001-01A
8	Clean glow plug well		
9	Install in the reverse order		


 Preglow system

Number	Designation	Engine 651
BA15.20-P-1001-01A	Glow plug on cylinder head	Nm 11

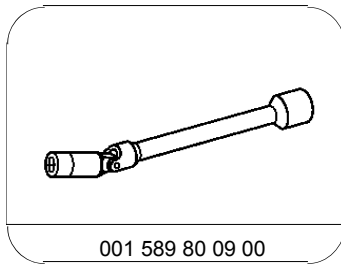

001 589 80 09 00

Socket wrench

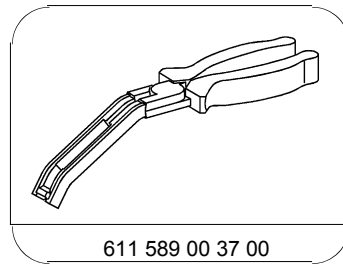

611 589 00 37 00

Pliers