


Model 167

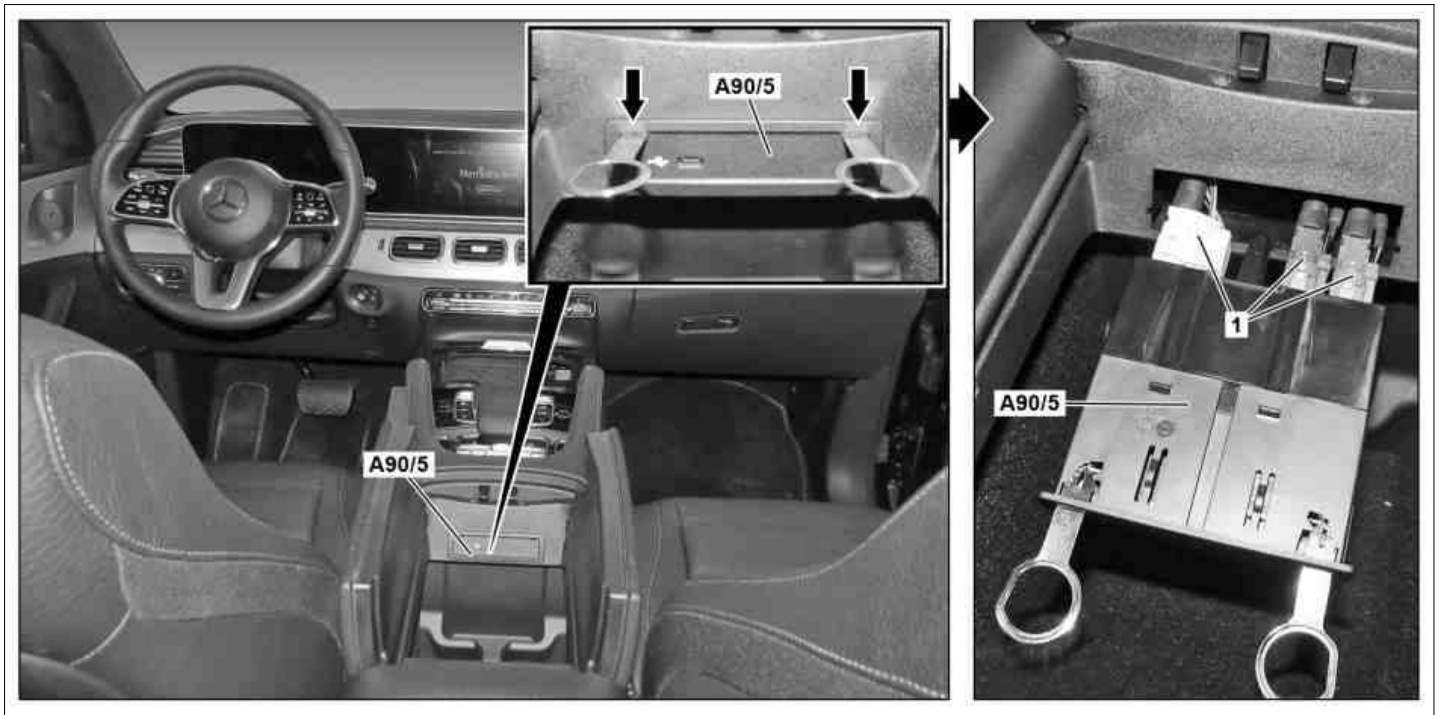


P82.60-A057-09

1 Electrical connectors

A90/5 Multimedia connection unit

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	<b>Remove/install</b>		
1	Switch off ignition and store transmitter key outside of transmitter range (min. 2 m).		
2	Open armrest of center console.		
3	Insert removal fixtures into openings (arrows) of multimedia connection unit (A90/5).	Removal assembly	*000589886300
4	Pull multimedia connection unit (A90/5) with removal fixtures far enough out of center console until electrical connectors (1) are accessible.	Do not crush or kink or subject electric lines to tension. This will result in damage to the electric lines and can impair their function. <b>Installation:</b> The multimedia connection unit (A90/5) must latch audibly into place on both sides. Removal assembly	*000589886300
5	Release and disconnect electrical connections (1).	The number of electrical connectors (1) varies depending on the vehicle equipment.	
6	Remove removal fixture from multimedia connection unit (A90/5).	Removal assembly	*000589886300
7	Install in the reverse order		

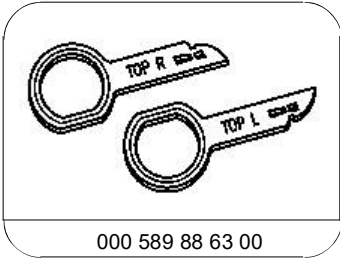

000 589 88 63 00

Removal assembly