

Model 167

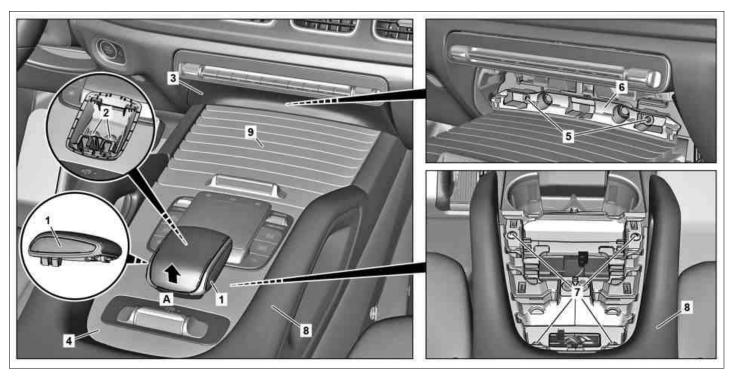

P68.20-5221-09

- 1 Hand rest
- 2 Bolts
- 3 Cover
- 4 Cover
- 5 Bolts

- 6 Cover
- 7 Bolts
- 8 Grab handle
- 9 Roller blind

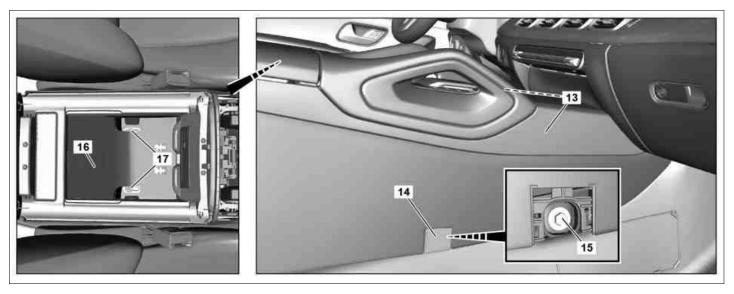

P68.20-A012-08

13 Side panelings

14 Cover

15 Screw

16 Fabric cover

17 Nuts



P68.20-5222-09

11 Bolts

2 Stowage compartment

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
\mathbf{X}	Remove/install		
1	Switch off ignition and store transmitter key outside of transmitter range (min. 2 m).		
2	Unclip handrest (1) at the rear end upward (arrow A) and remove toward rear.		
3	Unscrew screws (2) and remove base of handrest (1).		
4	Push roller blind (9) and unclip cover (4) from the front toward the rear until the electrical connectors are accessible.	Do not crush or kink or subject electric lines to tension. This will result in damage to the electric lines and can impair their function.	
5	Release electrical connectors, disconnect and remove cover (4).	i The number of electrical connectors varies according to vehicle equipment.	
6	Unclip cover (3).		
7	Remove screws (5) and remove cover (6).	i Installation: Ensure that the cover (6) is seated correctly.	
8	Unscrew screws (7).		

connectors are accessible. Then, release and disconnect them. Do not crush or kink or subject electric lines to tension. This will result in damage to the electric lines and can impair their function. This will result in damage to the electric lines and can impair their function. Insure that the electrical connectors are routed correctly. To prevent damage and noise during vehicle operation. The number of electrical connectors varies according to vehicle equipment. Expose electrical wiring harnesses on the bottom of the grab handle (8) and remove grab handle (8). The number of electrical lines varies according to vehicle equipment. Insure that wiring harnesses are routed correctly. To prevent damage and noise during vehicle operation. In the number of electrical lines varies depending on the vehicle equipment. Unclip side trims (13) from the rear to the front and remove them. Unclip the cover (14) and unscrew the screw (15). The instructions are shown only for one side and must be carried out on both sides. Open the rear storage space armrest and fold up the fabric cover (16). Remove nuts (17). Remove screws (11).			
bottom of the grab handle (8) and remove grab handle (8). Ensure that wiring harnesses are routed correctly. To prevent damage and noise during vehicle operation. The number of electrical lines varies depending on the vehicle equipment. Unclip side trims (13) from the rear to the front and remove them. Unclip the cover (14) and unscrew the screw (15). Open the rear storage space armrest and fold up the fabric cover (16). Remove nuts (17). Remove screws (11).	9	connectors are accessible. Then, release and	Do not crush or kink or subject electric lines to tension. This will result in damage to the electric lines and can impair their function. Installation: Ensure that the electrical connectors are routed correctly. To prevent damage and noise during vehicle operation. The number of electrical connectors varies
and remove them. Unclip the cover (14) and unscrew the screw (15). Open the rear storage space armrest and fold up the fabric cover (16). Remove nuts (17). Remove screws (11).	10	bottom of the grab handle (8) and remove grab	Ensure that wiring harnesses are routed correctly. To prevent damage and noise during vehicle operation. The number of electrical lines varies
(15). and must be carried out on both sides. Open the rear storage space armrest and fold up the fabric cover (16). Remove nuts (17). Remove screws (11).	11		
up the fabric cover (16). 14 Remove nuts (17). 15 Remove screws (11).	12		i The instructions are shown only for one side and must be carried out on both sides.
15 Remove screws (11).	13	Open the rear storage space armrest and fold up the fabric cover (16).	
	14	Remove nuts (17).	
Doing the center console slightly and move it as	15	Remove screws (11).	
far as necessary to the rear. Do not crush or kink or subject electric lines to tension. This will result in damage to the electric lines and can impair their function.	16	,	Do not crush or kink or subject electric lines to tension. This will result in damage to the electric lines
17 Remove stowage compartment (12).	17	Remove stowage compartment (12).	
18 Install in the reverse order	18	Install in the reverse order	