


Body Control Systems: Service and Repair

Remove/Install Front Overhead Control Panel

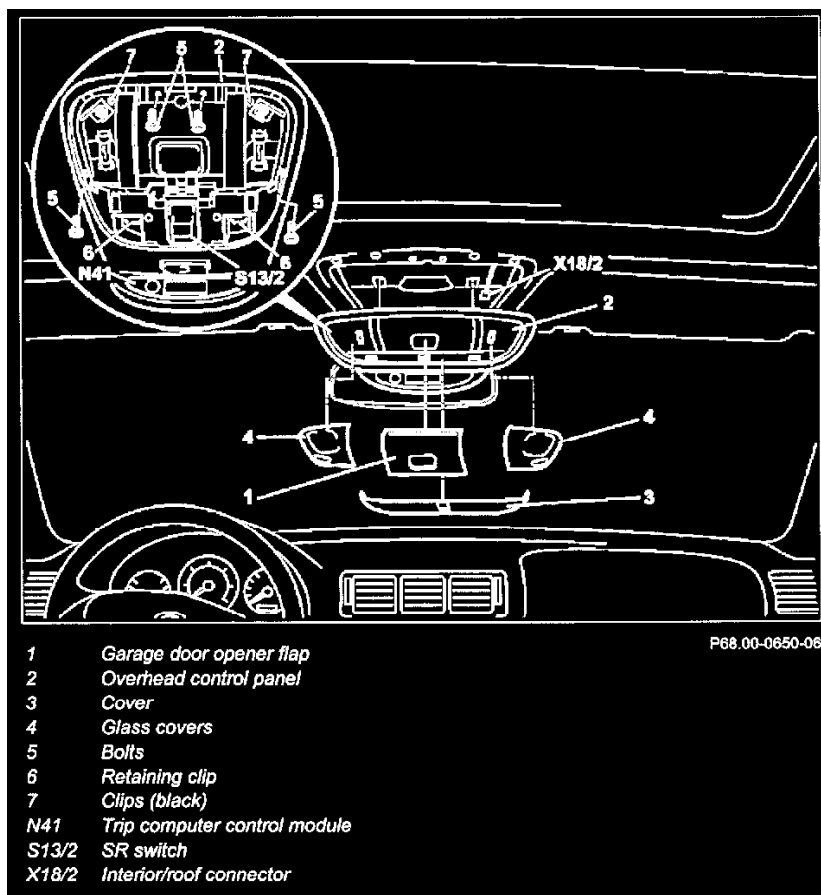

Remove/Install

- 1 Remove garage door opener flap (1) from overhead control panel (2)
- 2 Unclip cover (3) on the sliding/tilting roof switch (S13/2)

NOTE: 4 clips.

- 3 Unclip glass covers (4) from interior lights
- 4 Unscrew screws (5) below garage door opener flap (1) and glass covers (4)
- 5 Unclip clips (black) (7) next to the light switches

NOTE: Installation: Counterhold mounting plate with puller hooks inside of headliner.

- Hooked extraction tool: See **Special Tools** below.


- 6 Press both retaining clips (6) to rear and simultaneously press overhead control panel (2) to front

CAUTION: Position narrow plastic wedge or screwdriver in front of retaining lugs.

- 7 Remove overhead control panel (2) downward
 - 8 Remove sliding/tilting roof switch (S13/2)
 - 9.1 Remove trip computer control module (TRIP) (N41)
- NOTE:** With code 245, trip computer, only.

- 10 Detach interior/roof connector (X18/2) from overhead control panel (2)
- 11 Remove overhead control panel (2)
- 12 Install in the reverse order

Special Tools

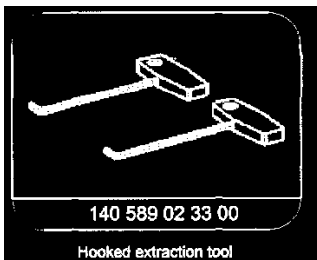

Hooked Extraction Tool P/N 140 589 02 33 00