






AR72.12-P-2410GH	Removing and installing exterior door handle on rear door	18.2.97
------------------	---	---------

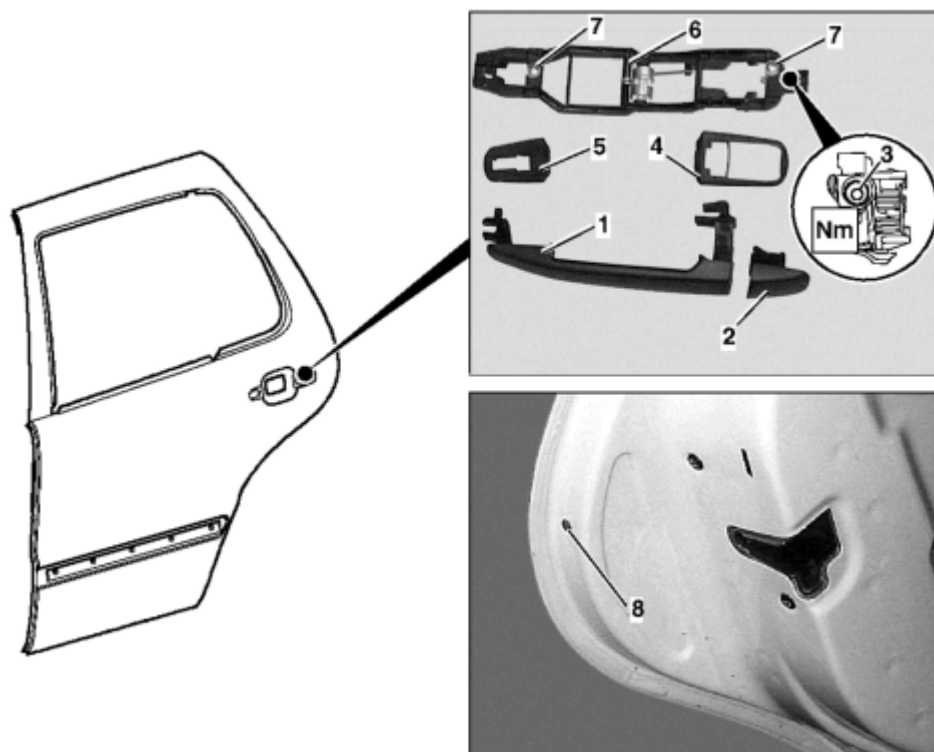

MODEL 163

- 1 Handle
- 2 Guide
- 3 Torx screw (T25x100)
- 4 Base
- 5 Base
- 6 Bearing bracket
- 7 Screws
- 8 Opening on inside of door




P72.12-0306-06

 	Removal, installation		
1	Loosen screw (3)	 Accessible through opening (8) in end of door, loosen screw (3) max. 5 turns	
			BA72.12-P-1002-01C

		 Torx bit set	000 589 01 10 00
2	Remove guide (2)		
3	Pull handle (1) toward rear together with base (4) out of bearing bracket (6) and remove		
4	Remove base (5)		
5.1	Remove bearing bracket (6)	 Only if bearing bracket is defective. The bearing bracket (8) can only be removed through the installation opening in the inner door panel. For this purpose ↓	
		Remove door liner on rear door	AR72.12-P-1010GH
6	Install in opposite order		
7	Check for proper function		

 Rear door

Number	Designation	Model 163
BA72.12-P-1002-01C	Screw for door handle	Nm 1.5

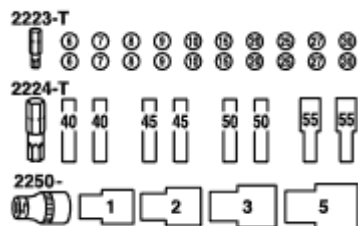

000 589 01 10 00

Torx bit set