


AR72.12-P-2510GH

Remove/install rear door lock

18.2.97



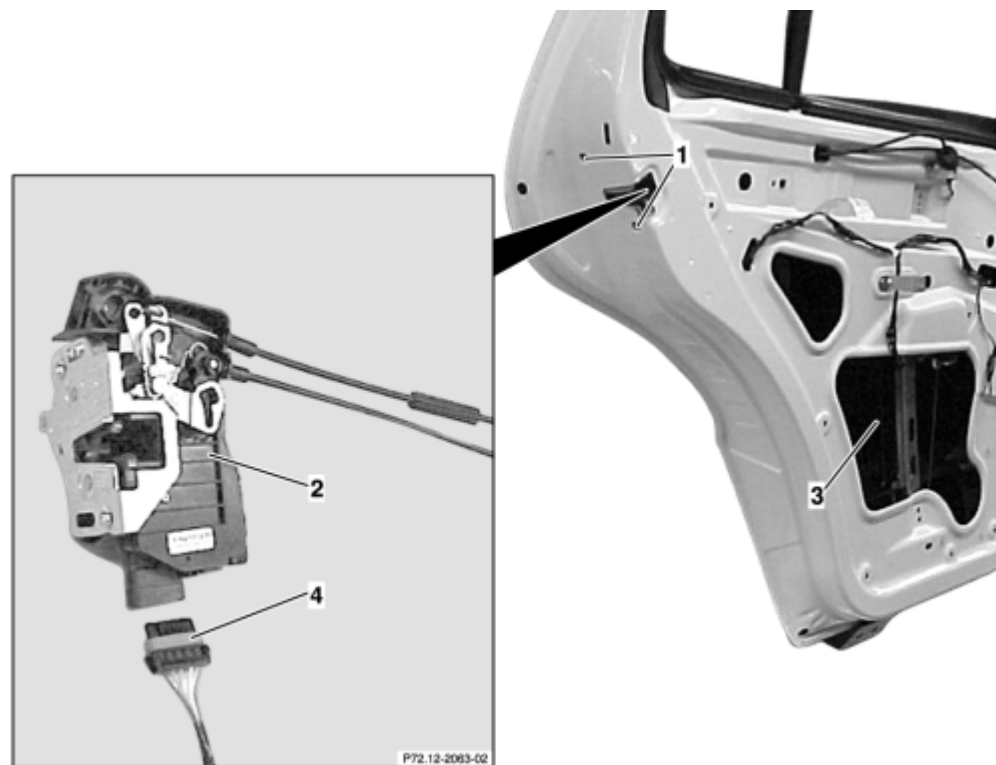


MODELS 163.154 /157 /172 /174

- 1 Bolts
- 2 Door lock
- 3 Bottom access cover
- 4 Connector




P72.12-2062-06

☒ ☒	Remove/install		
1	Remove door lining from rear door		<a href="#">AR72.12-P-1010GH</a>
2	Remove exterior door handle on rear door	<b>i</b> Remove bearing bracket through access cover in inner door panel.	<a href="#">AR72.12-P-2410GH</a>

3	Close crank window		
4	Undo plug-in connector (4)		
5	Unscrew screws (1) at door lock (2)	 Hold door lock to prevent it from falling down into the door.	
		 Nm	<a href="#">BA72.12-P-1001-01C</a>
		 Torx bit set	<a href="#">000 589 01 10 00</a>
6	Remove door lock (2) through the bottom access cover (3)	 Pull window guide rail gently forward, so that the door lock can be guided behind it.	
		 <b>Installation:</b> position window guide rail correctly.	
7	Install in the reverse order		

 Rear door

Number	Designation	Model Series 163
BA72.12-P-1001-01C	Bolt at door lock	Nm 8

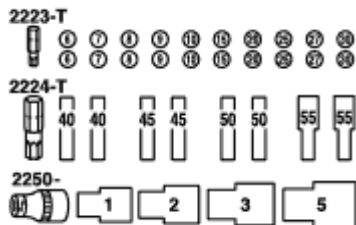

000 589 01 10 00

Torx bit set