AR88.70-P-9040GI


## Remove/install outside rearview mirror paneling

27.2.01

MODEL 163.154 /174 #A as of 289565, 163.154 /174 #X as of 754620, 163.157 /175

1 Mirror glass 2 Outside rearview mirror paneling


Arrows Retaining lugs

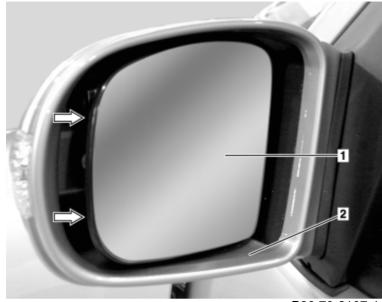

P88.70-2107-11

XX	Remove/install		
1	Adjust mirror glass (1) toward inside.		
2	Loosen retaining lugs (arrows) in housing.	S Long wedge	<u>115 589 03 59 00</u>
3	Remove outside rearview mirror paneling (2) toward outside.		
4	Disconnect connector from turn signal lamp.		

5 Install in the reverse order	
--------------------------------	--

 

115 589 03 59 00

Long wedge