

Document number: pe80_20-p-2000-99h

Document title: Wiring diagram of central locking (CL)

Code: Designation: Coordi nates:

F1	Fuse and relay module	4 B
F1	Fuse and relay module	12 C
F1	Fuse and relay module	18 B
F1	Fuse and relay module	23 B
F1F42	Fuse 42	5 C
F1K15	Central locking, tailgate unlocking relay	23 D
F1K20	Central locking, all doors lock relay	5 D
F1K23	Central locking, right front door and rear doors unlock relay	15 D
F1K24	Central locking, left front door and fuel filler flap unlock relay	9 D
G1	Battery	8 G
M14/10	Fuel filler flap central locking actuating motor	12 L
M14/5	Rear front door central locking actuating motor	7 L
M14/5s1	Central locking microswitch	6 L
M14/6	Left front door central locking actuating motor	3 L
M14/6s1	Central locking microswitch	2 L
M14/7	Tailgate central locking actuating motor	24 L
M14/7s1	Central locking microswitch	23 L
M14/8	Left rear door central locking actuating motor	16 L
M14/8s1	Central locking microswitch	15 L
M14/9	Right rear door central locking actuating motor	21 L
M14/9s1	Central locking microswitch	21 L
N10	All-activity module	2 A
N10	All-activity module	11 A
N10	All-activity module	20 A
N10	All-activity module	28 A
S21	Center console switch group	30 L
S21s10	Central locking switch	30 L
S87/2	Left rear door rotary tumbler microswitch	14 L
S87/3	Right rear door rotary tumbler microswitch	19 L
S87/6	Right front door rotary tumbler microswitch	5 L
S87/7	Left front door rotary tumbler microswitch	1 L
S88/1	Tailgate rotary tumbler switch	26 L
W16/4	Ground (output ground - component compartment - right)	9 L
W18	Ground (left front seat crossmember)	14 F
W18	Ground (left front seat crossmember)	31 D
W19	Ground (right front seat crossmember)	20 F
W29/2	Ground (right A-pillar)	2 E
W29/2	Ground (right A-pillar)	6 E
W8	Ground (tailgate)	23 H

Document number: pe80.20-p-2000-99h

Document title: Wiring diagram of central locking (CL)

Code:	Designation:	Coordinates:
X12/3	Terminal block (circuit 30, 15, 31, 3-pin)	7 E
X18	Interior/tail lamp harness connector (12-pin)	10 F
X18/1	Interior/tail gate connector	22 G
X35/1	Left front door separation point	1 J
X35/2	Right front door separation point	4 J
X35/3	Left rear door separation point	13 J
X35/4	Right rear door separation point	19 J
Z51/7	Interior connector sleeve I (circuit 31, center console)	30 G
Z51/8	Interior connector sleeve II (circuit 31, right front)	1 G
Z51/8	Interior connector sleeve II (circuit 31, right front)	5 G
Z51/9	Interior connector sleeve III (circuit 31, left front seat)	14 H
Z52/1	Interior connector sleeve IV (circuit 31, right front seat)	20 H
Z53/1	Interior connector sleeve (central locking motor 1)	15 F
Z53/2	Interior connector sleeve (central locking motor 2)	16 F
Z53/3	Interior connector sleeve (rear door rotary tumbler switch)	19 E
Z53/7	Interior connector sleeve (central locking motor 3)	10 G
Z55/1	Tail gate connector sleeve (circuit 31)	24 J



