

Item	Designation	Coord
<u>A2/5</u>	Radio antenna diplexer	26A
<u>A2/6</u>	CD changer (in trunk)	48L
<u>A2/13</u>	Sound amplifier	63A 73A
<u>A2/18</u>	FM/AM amplifier	30J
<u>A2/49</u>	Cellular telephone and GPS roof antenna	44L
<u>A2/56</u>	Radio and navigation unit	31A 40A 52A
<u>A35/8</u>	E-call control module	42L 53L
<u>A40/3</u>	COMAND operating, display and control unit	32A 41A
<u>B25/6</u>	Sound amplifier microphone	59L
<u>B25/6x1</u>	Sound amplifier microphone connector	58J
<u>C3</u>	Electrolytic capacitor (rear window noise suppressor)	22H
<u>C3x1</u>	Rear window noise suppression capacitor connector	22F
<u>F1</u>	Fuse and relay module	1B 14B 62L
<u>F1f10</u>	Fuse 10	8C
<u>F1f21</u>	Fuse 21	10C
<u>F1f40</u>	Fuse 40	62J
<u>F2</u>	Fuse and module box in right front footwell	16G
<u>F2f17</u>	Fuse 17	19E
<u>F2k4</u>	Relay 4	17E
<u>G1</u>	Battery	6H
<u>H4/3</u>	Left rear door speaker	71L
<u>H4/3x1</u>	Left rear door speaker connector	71J
<u>H4/4</u>	Right rear door speaker	73L
<u>H4/4x1</u>	Right rear door speaker connector	72J
<u>H4/5</u>	Left front door speaker	64L
<u>H4/5x1</u>	Left front door speaker connector	64J
<u>H4/6</u>	Right front door speaker	68L
<u>H4/6x1</u>	Right front door speaker connector	67J
<u>H4/7</u>	Left rear speaker	76L
<u>H4/7x1</u>	Left rear speaker connector	76J
<u>H4/8</u>	Right rear speaker	78L
<u>H4/8x1</u>	Right rear speaker connector	78J
<u>H4/17</u>	Bass module loudspeaker	75L
<u>H4/17x1</u>	Bass module speaker connector	74J
<u>H4/23</u>	Left front door mirror triangle speaker	66L
<u>H4/23x1</u>	Left front door mirror triangle speaker connector	66J
<u>H4/24</u>	Right front door mirror triangle speaker	69L
<u>H4/24x1</u>	Right front door mirror triangle speaker connector	69J

<u>L13/1</u>	Right antenna coil	26F
<u>L13/2</u>	Left antenna coil	28F
<u>N10</u>	All-activity module	2A 12A
<u>N10/1</u>	Extended Activity module (EAM)	56L
<u>N22</u>	AAC pushbutton control module	16A
<u>N22s1</u>	Rear window defroster switch	17B
<u>N47</u>	Traction systems control module	40L
<u>N96</u>	Frequency switchover control module	55L
<u>R1</u>	Heated rear window	27J
<u>S2</u>	Starter switch	5L
<u>U331</u>	Valid for VCS, CD changer, CTEL D2B	51F
<u>W6</u>	Ground (left wheelhousing in trunk)	25K
<u>W8</u>	Tailgate ground	23K 26D 32D
<u>W16/4</u>	Ground (output ground - component compartment - right)	7L
<u>W29/2</u>	Ground (right A-pillar)	36L 61L
<u>X4/37</u>	Terminal block (circuit 30)	5G
<u>X11/4</u>	Data link connector	37L
<u>X12/6</u>	Circuit 31 terminal block at relay module 2	21J
<u>X12/7</u>	Circuit 15R terminal block at relay module 2	19J
<u>X12/8</u>	Circuit 15 terminal block at relay module 2	20J
<u>X12/9</u>	Circuit 30 terminal block at relay module 2	20J
<u>X12/12</u>	Circuit 30 terminal block at relay module 1	5E
<u>X12/13</u>	Circuit 15 terminal block at relay module 1	6E
<u>X12/14</u>	Circuit 31 terminal block at relay module 1	7E
<u>X18</u>	Interior and taillamp harness connector, cockpit	22D 37J
<u>X18/2</u>	Interior/roof connector	58F
<u>X25/2</u>	Engine compartment/interior compartment connector	39J
<u>X35/1</u>	Left front door separation point	64E
<u>X35/2</u>	Right front door separation point	67E
<u>X35/3</u>	Left rear door separation point	70E
<u>X35/4</u>	Right rear door separation point	72E
<u>X39/39</u>	Handy connector	46F
<u>Z20</u>	Shielding placed inside insulated tubing	60J
<u>Z28/5</u>	Left front door speaker group connector sleeve (+ signal)	64G
<u>Z28/6</u>	Left front door speaker group connector sleeve (- signal)	65F
<u>Z28/7</u>	Right front door speaker group connector sleeve (+ signal)	67G
<u>Z28/8</u>	Right front door speaker group connector sleeve (- signal)	68F
<u>Z28/25</u>	Left and right speaker connector sleeve (+ signal)	77E
<u>Z28/26</u>	Left and right speaker connector sleeve (- signal)	75F
<u>Z50/1</u>	Cockpit connector sleeve (circuit 58d)	11J

<u>Z50/5</u>	Cockpit circuit 30 connector sleeve	4G
<u>Z50/8</u>	Cockpit connector sleeve (circuit 15R)	3G
<u>Z51/6</u>	Interior connector sleeve (circuit 58d)	12J
<u>Z51/15</u>	Interior connector sleeve, radio and CTEL, circuit 31	35F
<u>Z51/16</u>	Interior connector sleeve (airbag, radio diagnosis)	37F
<u>Z51/21</u>	Circuit 30 SDAR connector sleeve	10H
<u>Z52/2</u>	Interior connector sleeve V (circuit 31, left rear)	25G
<u>Z52/9</u>	Backup lamps interior connector sleeve	51F
<u>Z53/17</u>	Connector sleeve in interior, wake-up signal D2B	50H 60L
<u>Z53/18</u>	Interior connector sleeve, left rear speed sensor	39F
<u>Z53/20</u>	Interior connector sleeve, 15R	8L
<u>Z53/23</u>	Interior connector sleeve, bass module loudspeaker (+ signal)	75E
<u>Z53/24</u>	Interior connector sleeve, bass module loudspeaker (- signal)	74F