
AR13.25-P-3200B Page 1 of 3

AR13.25-P-3200B	Removing/installing poly-V-belt tensioning device	11.6.96	ı
-----------------	---	---------	---

ENGINE 112, 113 (except 113.965 /981) in MODEL 163

Shown on engine 112

- 1 Viscous fan
- 2 Fan shroud
- 3 Poly-V-belt
- 4 Tensioning device 4a Tensioning pulley
- 4b hexagon 5 Gas-operated spring

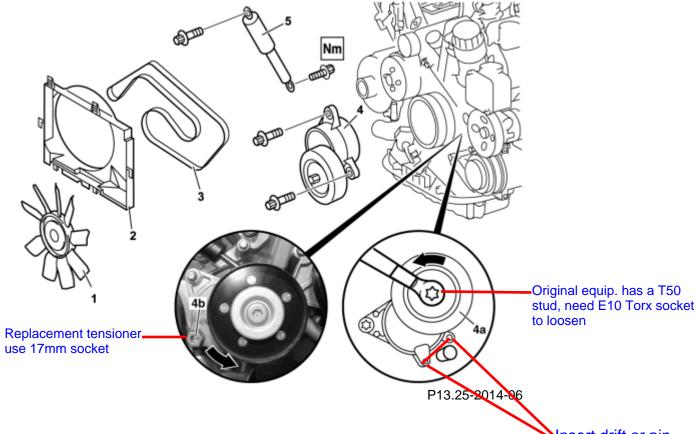

XX	Removing/installing		
1.1	Remove viscous fan (1)		AR20.40-P-5660C
		i Right-hand thread!	
2.1	Remove fan shroud (2)	i On model 163: Unscrew the bolts	

Insert drift or pin

		at the bottom of the fan shroud.	
3	Remove poly-V-belt (3)		AR13.22-P-1202B
4.1	Rotate the tensioning pulley (4a) in the anti-clockwise direction and lock		
		Lock tensioning pulley with drift or pin (diameter 5 mm).	
5	Remove tensioning device (4)	i Engine 113: ↓	
		Self-tapping screw for belt tensioner on timing case cover	BA13.25-P-1001- 01D
		i Engine 112:↓	
		Self-tapping screw for belt tensioner on timing case cover	BA13.25-P-1001- 01M
6	Install in reverse order		

Hm Belt tensioning device

Number	Designation			Engines 112.942/970
BA13.25-P-1001-01M	Self-tapping bolt for belt tensioner on timing case cover	Thread not pre-tapped	Nm	35
		Thread pre-tapped	Nm	25
BA13.25-P-1003-01M	Shock absorber for belt tensioning device to belt tensioning device		Nm	25
BA13.25-P-1004-01M	Shock absorber for belt tensioning device to coolant pump housing		Nm	35

Nm Belt tensioning device

Number	Designation			Engines 113.942/965/981
BA13.25-P-1001-01D	Self-tapping bolt for belt tensioner on	Thread not pre-tapped	Nm	35
I				

AR13.25-P-3200B

timing case cover Thread pre-tapped Nm 25