


AR68.30-P-4010GH

Remove/install paneling in footwell


9.4.97

MODELS 163

- 1 Door sill molding cover
- 2 Door seal
- 3 Driver-side paneling
- 4 Passenger side paneling
- 5 Bolt
- 6 Engine hood release lever
- 7 Arresting mechanism
- 8 Fuse and relay box cover
- 9 Nut

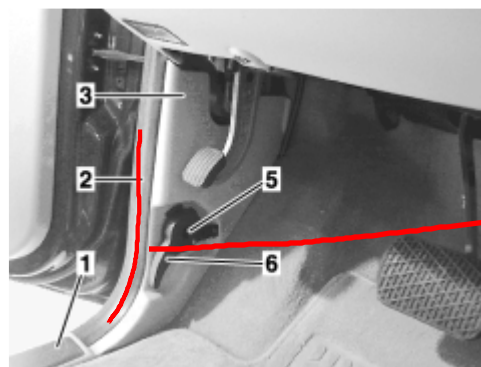

P68.30-2266-01

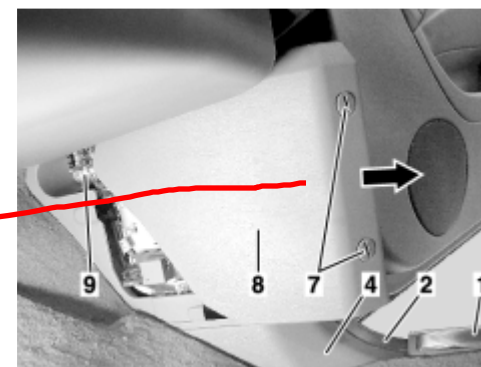

P68.30-2267-01

☒ ☒	Remove/install		
1	Remove front door sill molding cover (1)		
2	Unscrew screws from door sill molding on rocker panel	i Only two front screws.	
3	Pull off door seal (2) in the area of driver's side paneling (3) or front passenger's side paneling (4)		
4	Unscrew screw (5) for engine hood release lever (6) on A-pillar	i Driver's side only.	
5	Unhook engine hood cable and remove engine hood release lever (6)	i Driver's side only.	
6.1	Rotate locks (7) on the cover of the fuse and relay box (8) 1/4 revolution counterclockwise into the vertical position	i As of 09.99. Passenger side only.	
7.1	Pull back cover of fuse and relay box	i As of 09.99. Passenger side only.	

	(8) (arrow) and remove		
8.1	Unscrew nut (9)	i As of 09.99. Passenger side only.	
9	Unclip driver's side paneling (3) and front passenger's side paneling (4) and remove	i Lift door sill molding slightly to allow removal.	
10	Install in the reverse order		