 






 











## ENGINE 612

## Modification notes

12.9.02	Engine oil level modified	<p>Step 9:</p> <p> Only Model 203:</p> <p>Up to engine end number: 134 163 oil level <b>MAX. 135 mm, MIN 110 mm.</b></p> <p>As of engine end number: 134 164 oil level <b>MAX. 124,5 mm, MIN 99,5 mm.</b></p>	
---------	---------------------------	--	--

	<b>Remove</b>		
 <b>Danger!</b>	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the hydraulic hoist and position the four support plates below the hoist support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
 <b>Danger!</b>	<b>Risk of accident</b> caused by vehicle starting off by itself when engine is running. <b>Risk of injury</b> caused by contusions and burns when working in engine during starting procedure	Secure vehicle to prevent it from moving. Wear closed and snug-fitting work clothes. Do not grasp hot or rotating parts.	AS00.00-Z-0005-01A
	Change the engine oil only when the engine is at operating temperature		
1	Remove trim panel of cylinder head cover		AR01.20-P-5014-02B
2	Replace oil filter element, drain oil filter	<p> Model 203: Remove clamp attaching fuel line in order to insert wrench socket.</p> <p></p> <p> Socket wrench bit</p>	<p>AP18.00-P-0101-06EG</p> <p>*BA18.20-P-1002-01G</p> <p>*103589020900</p>
3.1	Suction off engine oil		AP18.00-P-0101-02Z
4.1	Remove rear left frame cross brace	<p> Only necessary when draining engine oil at oil drain plug.</p> <p>MODEL 163</p> <p>Model 203 except 203.018/218/718, 209</p> <p>Model 210</p>	<p>AR94.30-P-5300P</p> <p>AR94.30-P-5300AB</p>
f			
4.2	Detach lower engine compartment paneling	<p> Only necessary when draining engine oil at oil drain plug.</p> <p>Only Model 203.018/218/718</p>	AR61.20-P-1105P
f			
5.1	Unscrew oil drain plug, drain engine oil		
	<b>Install</b>		
6.1	Screw in oil drain plug	<p> Replace sealing ring, in order to avoid leakage.</p> <p></p>	*BA01.45-P-1003-01A
7	Pour in engine oil	<p> Note specified and approved quality grades and viscosity classes conforming to SAE at enduring ambient temperatures.</p> <p></p>	<p>*BE18.00-P-1001-02B</p> <p>*BF18.00-P-1001-01A</p> <p>BB00.40-P-0224-01A</p>
g	Viscosity classes of engine oils (car engines)	Sheet 224.1	
8	Run engine and inspect for leaks		
9	Switch off engine		
10.1	Fit on bottom part of noise encapsulation	<p> Only necessary when draining engine oil at oil drain plug.</p> <p>Model 210</p> <p>MODEL 203, 209</p> <p>MODEL 163</p>	<p>AR94.30-P-5300AB</p> <p>AR94.30-P-5300P</p>
f			
10.2	Install lower engine compartment paneling.	<p> Only necessary when draining engine oil at oil drain plug.</p> <p>Only Model 203.018/218/718</p>	AR61.20-P-1105P
f			

11	Check oil level approx. 5 min. after switching off warm engine	<p> Insert oil dipstick up to the stop and keep to a residence time of at least 3 seconds. Model 163, 210 with Engine 612 Model 203, Model 209 with Engine 612</p> <p> On Model 203, Model 209 after oil level check pay attention to correct seating of the cap, otherwise it could result in engine damage.</p> <p> Only Model 203: Up to engine end number: 134 163 oil level <b>MAX. 135 mm, MIN 110 mm.</b> As of engine end number: 134 164 oil level <b>MAX. 124,5 mm, MIN 99,5 mm.</b> Measuring rod </p>	*BE18.00-P-1001-02B  *120589072100
12	Install trim panel of cylinder head cover		AR01.20-P-5014-02B
			*BA01.20-P-1002-01A
			*BA01.20-P-1003-01A

### Test values for engine lubrication - general

Number	Designation	Engine 612.961	Engine 612.963
BE18.00-P-1001-02B	Dipstick marking		
	Numbers on handle	Number	
	Color red t 1	60207	60206
	Color black t 2		
	Color green t 3		
	Color gentian blue t 4		
	Round handle	Color	-
	Bottle opener-shaped handle	Color	1

### Oil pan

Number	Designation	Engine 612.961/962/ 963/965/966, 613.961	Engine 612.967	Engine 612.990
BA01.45-P-1003-01A	Oil drain plug at oil pan	M12 Nm	-	-
		M14 Nm	30	30

### Engine lubrication, oil filter

Number	Designation	Engine 612.961/962/ 963/967/990, 613.960/961
BA18.20-P-1002-01G	Screw cap at oil filter	Nm 25

### Crankcase ventilation, cylinder head cover

Number	Designation	Engine 612.961/ 962/967	Engine 612.963	Engine 612.990


BA01.20-P-1002-01A	Screw of trim panel of cylinder head cover to cylinder head cover	Nm	10	10	8
BA01.20-P-1003-01A	Screw attaching cover panel to charge air distribution pipe	Nm	10	10	-

### Engine lubrication system

Number	Designation	Engine 612.961	Engine 612.962/967	Engine 612.963/966	
BF18.00-P-1001-01A	Engine oil Filling capacity (oil and filter change)	Liter	7,0	6.5	7.5
	Specifications for Operating Fluids	Sheet	BB00.40-P-0228-01A	BB00.40-P-0228-01A	BB00.40-P-0228-01A
		Sheet	BB00.40-P-0228-03A	BB00.40-P-0228-03A	BB00.40-P-0228-03A
		Sheet	BB00.40-P-0228-05A	BB00.40-P-0228-05A	BB00.40-P-0228-05A
		Sheet	BB00.40-P-0229-01A	BB00.40-P-0229-01A	BB00.40-P-0229-01A
		Sheet	BB00.40-P-0229-03A	BB00.40-P-0229-03A	BB00.40-P-0229-03A
		Sheet	BB00.40-P-0229-05A	BB00.40-P-0229-05A	BB00.40-P-0229-05A


### Engine lubrication system

Number	Designation	Engine 612.990	
BF18.00-P-1001-01A	Engine oil Filling capacity (oil and filter change)	Liter	6.5
	Specifications for Operating Fluids	Sheet	BB00.40-P-0228-01A
		Sheet	BB00.40-P-0228-03A
		Sheet	BB00.40-P-0228-05A
		Sheet	BB00.40-P-0229-01A
		Sheet	BB00.40-P-0229-03A
		Sheet	BB00.40-P-0229-05A

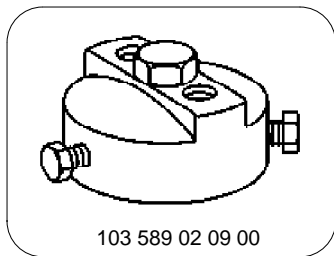

103 589 02 09 00

Socket wrench bit

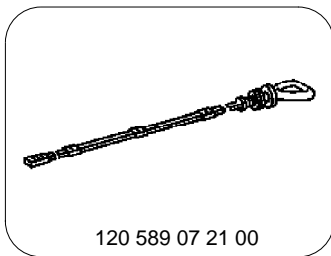

120 589 07 21 00

Measuring rod

### Commercially available tools (see Workshop Equipment Manual)

Number	Designation	Make (e. g.)	Order number
WH58.30-Z-1007-16A	Engine oil extractor	Deutsche Tecalemit Am Metallwerk 11 33659 Bielefeld	1.386950.2