

AD80.35-P-2001-02GH	RFL synchronizing remote control keys		
---------------------	---------------------------------------	--	--

For synchronization carry out the following steps:

- place transmitter key in ignition lock and turn to position 2
- check whether transmitter key is recognized as valid (ATA status indicator (E33) flashes),
- extract transmitter key from ignition lock,
- within 10 seconds:
 - press "close" pushbutton, hold and simultaneously
 - press "open" pushbutton five times one after the other,
 - release pushbuttons and then press one of the two pushbuttons once

The radio frequency remote control of the transmitter key can only be used again after synchronizing.



It may be necessary to synchronize a transmitter key if the battery in the transmitter key has been replaced.