

Tachometer (11)

The tachometer displays the present engine speed in revolutions per minute (RPM).

To help protect the engine, the fuel supply is interrupted if the engine is operated above its specified limit.

Trip computer (standard; optional on model ML 320)



The trip computer is located in the overhead console.

Function keys are:

- RESET
- MODE

Note:

With engine not running, the display switches off automatically 30 seconds after the last entry.

To select a mode:

With key in steering lock position 1 or 2, press MODE key repeatedly to illuminate the display and scroll through menu for one of the following options:

1. Date
2. Stop watch
3. Present fuel consumption – displays miles per gallon or liters per 100 km.
4. Average fuel consumption – displays miles per gallon or liters per 100 km
5. Distance remaining with fuel presently in tank.

Note:

The word FUEL is displayed when fuel supply drops to the reserve level. The distance remaining is no longer shown.

6. Select display units –
in miles (date shows month/day/year)
or kilometers (date shows day/month/year)
7. Off.

To change an entry, select mode to be changed:

- Date –
Press RESET key, the month shown blinks. Now press MODE key to advance to selected month.
Press RESET key again, the day shown blinks. Now press MODE key to advance to selected day.
Press RESET key again, the year shown blinks. Now press MODE key to advance to selected year.
Press RESET key again, the display stops blinking and the date is set.
- Stop watch –
Press RESET key to start the count. Press again to stop the count. Press and hold RESET key to reset stop watch.
- Average fuel consumption –
Press RESET key to delete present reading.
- Display units –
Press RESET key to change between miles and km display.