

AR88.70-P-9020GH

Removing and installing mirror glass

12.2.97

MODEL 163.154 /172 /174 up to 31.8.01

1 Mirror glass


2 Support spring

3 Connector


Arrows Mirror glass mount

M21/1r1 Mirror heater

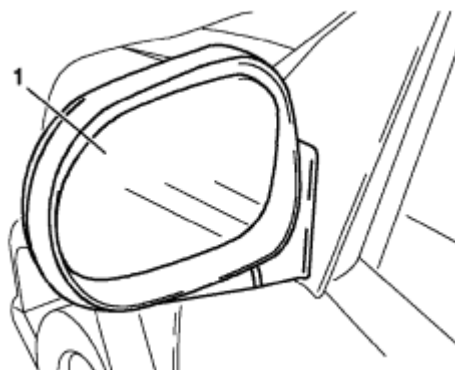


M21/2r1 Mirror heater (not illustrated)

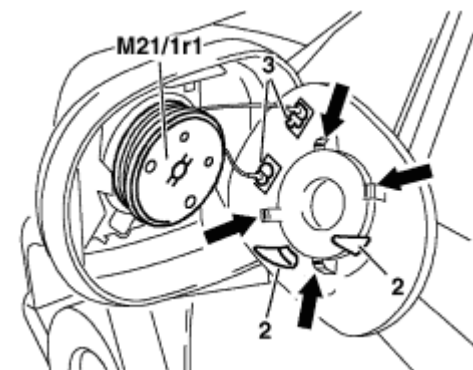

P88.70-0253-01



P88.70-0254-01

☒ ☒	Remove/install		
1	Tilt mirror glass (1) at top outward	 Actuate electrical mirror adjustment switch	
2	Press mirror glass (1) off of drive		110 589 03 59 00
3	Disconnect connector (3) from mirror heater (M21/1r1 and M21/2r1)		
4	Remove mirror glass (1)	 Installation: Install mirror glass (1) from bottom to top, thereby observe support spring (2) and mirror glass mounts (arrows).	
5	Install in the reverse order		



110 589 03 59 00

Assembly wedge