

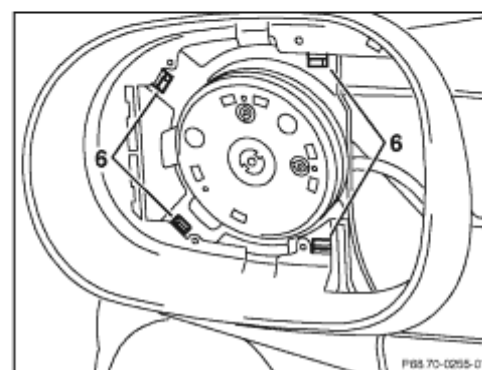
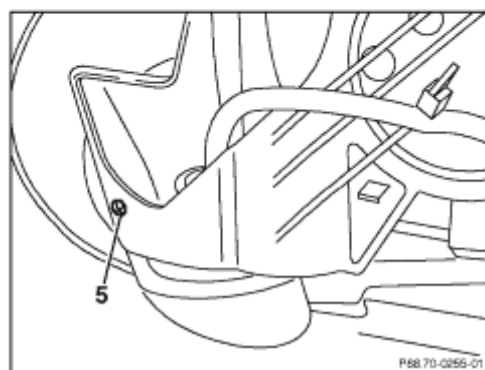
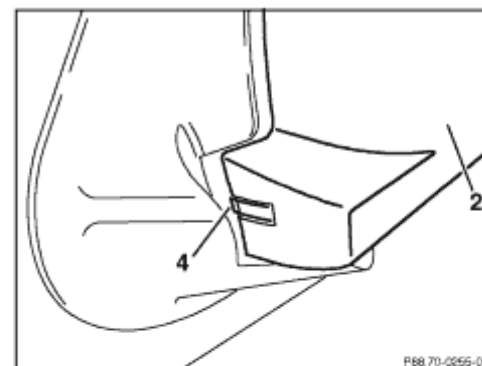
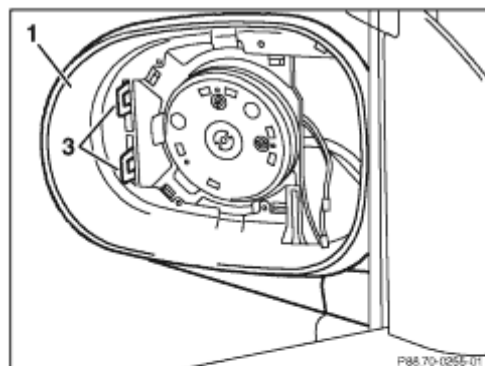
AR88.70-P-9040GH

Removing and installing outside rearview mirror cover

12.2.97




MODEL 163.154 /172 /174 up to 31.8.01

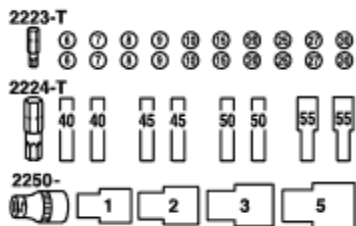
- 1 Frame
- 2 Mirror housing paneling
- 3 Catches in mirror housing
- 4 Outer catch
- 5 Bolt
- 6 Clips



P88.70-0255-06

☒ ☒	Remove/install		
1	Remove mirror glass		AR88.70-P-9020GH
2	Release catch in mirror housing (3)	i Press mirror housing out of frame (1) with slight pressure	
3	Release paneling for mirror housing (2)		

	from frame (1)	 Outer catch (4) only accessible if mirror housing is pivoted toward door	
4	Remove mirror housing paneling (2)		
5	Unscrew screw (5) from frame (1)	 Torx bit set	000 589 01 10 00
6	Unclip frame (1) from mirror actuator motor	 Pivot mirror housing back to initial position. Unclip clips (6) from actuator motor.	
6	Remove frame (1)		
7	Install in the reverse order		



000 589 01 10 00

Torx bit set