

Item	Designation	Coordir
<u>A1</u>	Instrument cluster	16A
<u>A1e53</u>	LOW RANGE indicator lamp	16B
<u>A55</u>	Transfer case range selection motor	27D
<u>A55x1</u>	Transfer case range selection motor connector	25G
<u>F1</u>	Fuse and relay module	2A 10B 18K
<u>F1f22</u>	Fuse 22	11C
<u>F1f8</u>	Fuse 8	9C
<u>F1k12</u>	Circuit 15 relay	6C
<u>G1</u>	Battery	5H
<u>N10</u>	All-activity module	2A
<u>N78</u>	Transfer case control module	8L 17L 25L
<u>S2</u>	Starter switch	3L
<u>S97/6</u>	Double switch combination	19G
<u>S97/6e2</u>	Illumination	19G
<u>S97/6s1</u>	LOW RANGE switch	20G
<u>W16/4</u>	Ground (output ground - component compartment - right)	6L
<u>W18</u>	Ground (left front seat crossmember)	9F
<u>W29/2</u>	Ground (right A-pillar)	19A
<u>X12/12</u>	Circuit 30 terminal block at relay module 1	3D
<u>X12/13</u>	Circuit 15 terminal block at relay module 1	4D
<u>X12/14</u>	Circuit 31 terminal block at relay module 1	6D
<u>X18</u>	Interior and taillamp harness connector, cockpit	15F 23G
<u>X4/37</u>	Terminal block (circuit 30)	4F
<u>Z50/1</u>	Cockpit connector sleeve (circuit 58d)	18G
<u>Z50/11</u>	CAN-L cockpit connector sleeve	16E
<u>Z50/12</u>	CAN-H cockpit connector sleeve	15E
<u>Z50/4</u>	Cockpit connector sleeve (circuit 31, II right)	19C
<u>Z50/5</u>	Cockpit circuit 30 connector sleeve	4G
<u>Z50/9</u>	Cockpit connector sleeve (circuit 15 II)	2G
<u>Z51/1</u>	Interior connector sleeve (CAN-High 1)	15H
<u>Z51/2</u>	Interior connector sleeve (CAN-Low 1)	16H
<u>Z51/5</u>	Interior connector sleeve (circuit 15)	11H
<u>Z51/9</u>	Interior connector sleeve III (circuit 31, left front seat)	8H

