

AR88.70-P-9000GH	Remove/install complete outside rearview mirror	12.2.97
------------------	---	---------




MODEL 163

**Illustrated up to VIN A289564,
X754619**

- 1 Paneling
- 2 Screw
- 3 Nuts

M21/1 Left electrically adjustable and heated outside mirror

M21/1x1 Left electrically adjustable and heated outside mirror connector

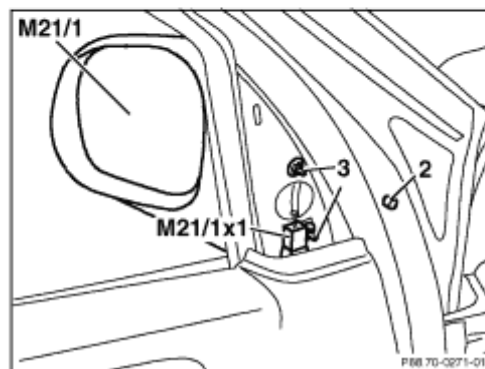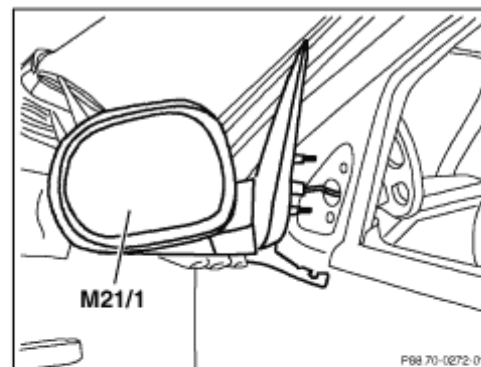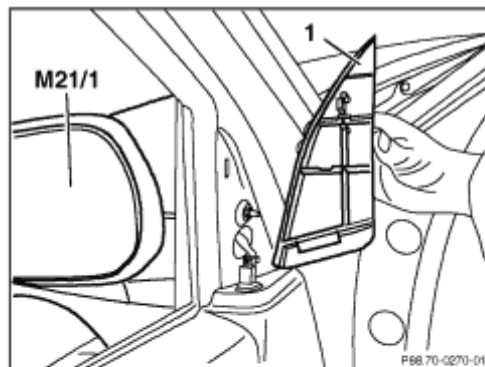

P88.70-0252-06

	<p>Removing and installing</p>		
<p>1</p>	<p>Press off paneling (1) with assembly wedge</p>	<p>i As of VIN A289565, X754620: If present, disconnect connector from loudspeaker.</p>	
		<p>W Assembly wedge</p>	<p>110 589 03 59 00</p>

2	Unscrew screw (2)		
3	Unscrew nut (3)	<p>i Secure outside rearview mirror against falling down</p> <p>i Installation: Up to VIN A289564, X754619 fasten mounting lug for connector for left electrically adjustable and heated outside rearview mirror (M21/1x1) or for connector for right electrically adjustable and heated outside rearview mirror on bottom stud bolt.</p>	
4	Separate connector for left electrically adjustable and heated outside rearview mirror (M21/1x1) or connector for right electrically adjustable and heated outside rearview mirror.		
5	Remove left electrically adjustable and heated outside rearview mirror (M21/1) or right electrically adjustable and heated outside rearview mirror		
6	Install in the reverse order		



110 589 03 59 00

Assembly wedge