

AP83.00-P-8381GH	Replace dust filter for heating/air conditioning	8.7.97
------------------	--	--------

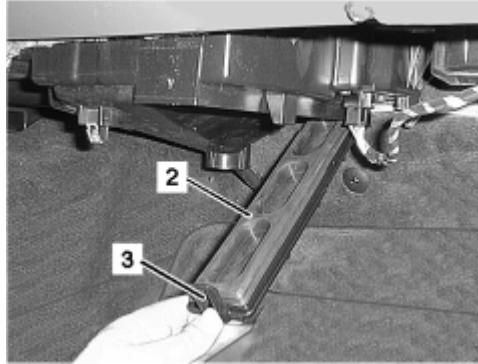
MODEL 163.154 /157 /172 /174 /175

**Fig. on left**

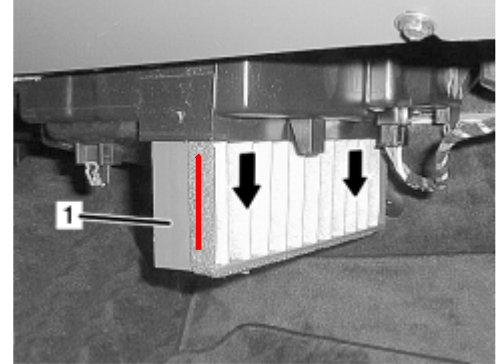
- 2 Cover
- 3 Retaining clamp

**Illustration on right**



 
 
 
- 1 Dust filter



P83.00-0356-01



P83.00-0357-01

	Remove/install		
1	Remove cover below instrument panel (passenger side)		
	Remove/install cover below instrument panel (right)	 Up to 31.08.99	<a href="#">AR68.10-P-1520GH</a>
		 As of 01.09.99	<a href="#">AR68.10-P-1520GI</a>
2	First unlatch retaining clamp (3), then remove cover (2)		
3	Withdraw dust filter (1) downwards (arrows) <b>foam strip to the right</b>	 The dust filter must not be cleaned; it must be replaced.	
4	Install in the reverse order		