

AP83.00-P-8381GH	Replace dust filter for heating/air conditioning	8.7.97
------------------	--	--------

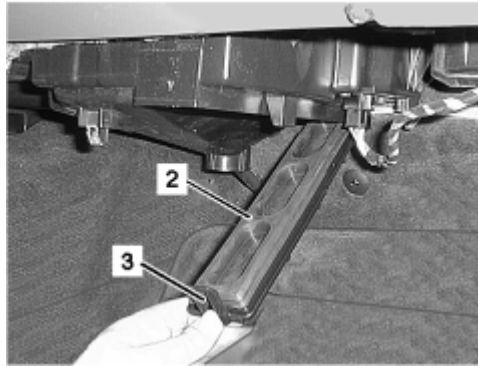
MODEL 163.154 /157 /172 /174 /175

Fig. on left

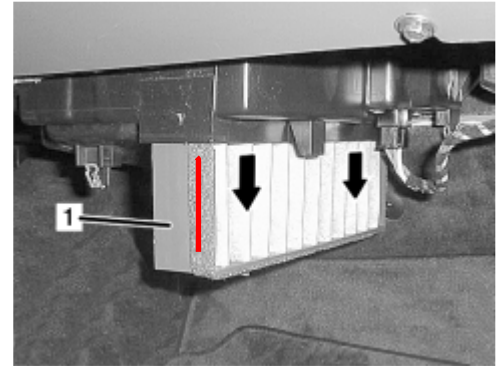
- 2 Cover
- 3 Retaining clamp

Illustration on right




 
 
 
- 1 Dust filter



P83.00-0356-01



P83.00-0357-01

 	Remove/install		
1	Remove cover below instrument panel (passenger side)		
	Remove/install cover below instrument panel (right)	 Up to 31.08.99	AR68.10-P-1520GH
		 As of 01.09.99	AR68.10-P-1520GI
2	First unlatch retaining clamp (3), then remove cover (2)		
3	Withdraw dust filter (1) downwards (arrows) foam strip to the rear	 The dust filter must not be cleaned; it must be replaced.	
4	Install in the reverse order		