


AR01.00-P-1300-03HA	Firing order		
---------------------	--------------	--	--

 

Firing order

111, 601, 604, 611, 271

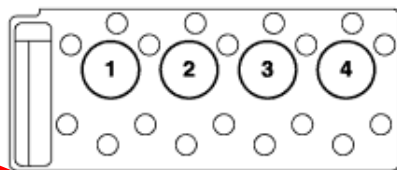

P01.00-2282-01



602, 605

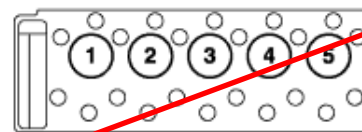

P01.00-0031-01

Firing order

 603, 606,

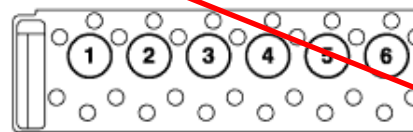


P01.00-0204-01


Firing order

Bank 1

 112



Front of engine


 


P01.10-0311-01

Bank 2

Right

  113



P01.00-0457-01

Left

