


AR54.30-P-6049GH	Removing and installing bulbs of instrument cluster	21.1.97
------------------	---	---------



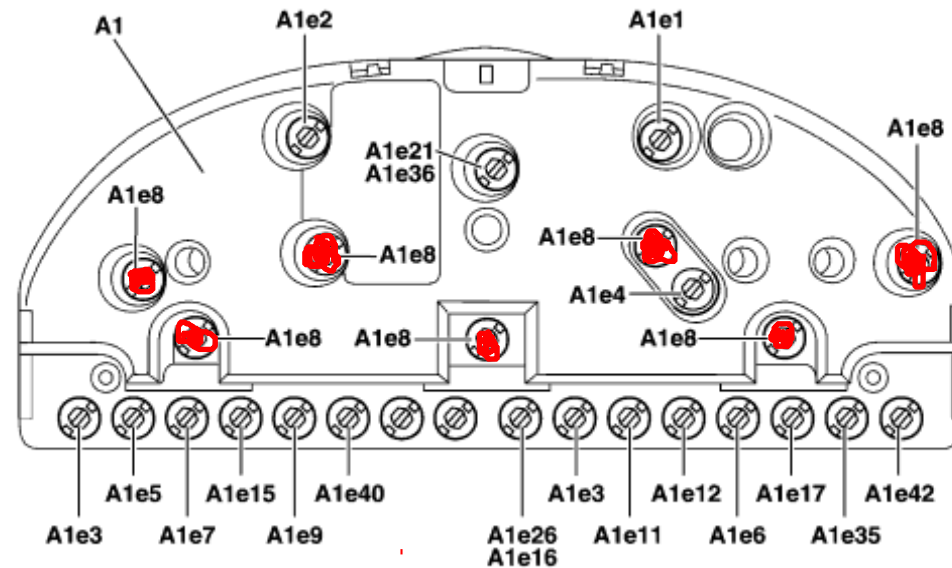


MODEL 163**Instrument cluster**


A1e1 Left turn signal indicator lamp
 A1e2 Right turn signal indicator lamp
 A1e3 High beam indicator lamp
 A1e4 Fuel reserve indicator lamp
 A1e5 Generator charge indicator lamp
 A1e6 Brake pad wear indicator lamp
 A1e7 Low brake fluid level/parking brake indicator lamp
 A1e8 Instrument illumination
 A1e9 Seat belt reminder lamp
 A1e11 Low ECL indicator lamp
 A1e12 Low engine oil level indicator lamp
 A1e15 SRS MIL
 A1e17 ABS MIL
 A1e21 ASR warning lamp
 A1e26 "CHECK ENGINE" MIL
 A1e35 ETS MIL
 A1e36 ETS warning lamp
 A1e40 Steering lock warning lamp
 A1e42 ESP MIL



Illumination Bulbs A1e8 part #A001 544 55 94 12v/2w these bulbs can be removed from holder. Purchase #194 bulbs at any store.


All Others part #N910141 000000 12v/1.5w these bulbs w/holder must be purchased from dealer P54.30-0632-06

 	Removing, installing		
1	Disconnect ground cable from battery	 To prevent the disconnected ground cable contacting the ground point W16/4 unintentionally, insulate ground cable terminal.	AR54.10-P-0003A
2	Remove instrument cluster		AR54.30-P-6015GH
3	Remove bulbs		AR54.30-P-6049-01Z
		 Installation: Install bulbs	AR54.30-P-6049-02Z
4	Install in opposite order		

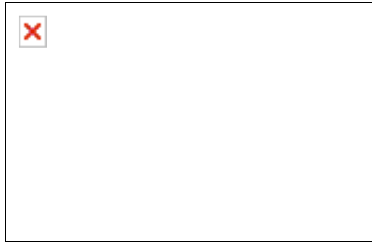

129 589 00 09 00

Socket

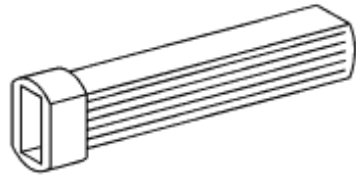

129 589 01 09 00

Socket