


AR68.30-P-4490GH Page 1 of 3


AR68.30-P-4490GH	Remove/install paneling on C-pillar	3.3.97
AR68.30-P-4490GH	Remove/install paneling on C-pillar	3.3.97

MODEL 163

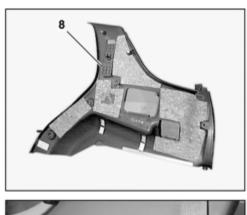

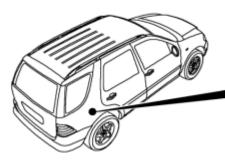

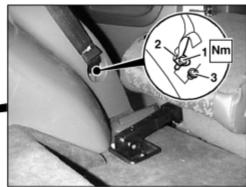

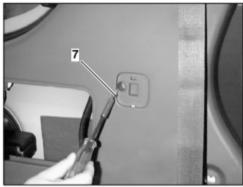





P68.30-0506-09

- 1 Screw 2 Belt end fitting 3 Distance sleeve

4 Bracket 5 Cover 6 Screw

7 Screw 8 Paneling

XX	Remove, Install		
1.1	Remove third seat row	i Only with 3rd seat row, code 847.	

AR68.30-P-4490GH Page 2 of 3

		See operating instructions.		
2	Remove safety net	i See Operating Instructions		
3.1	Remove spare wheel cover	i Only model 163.174. AR68.30-P-46100		
4	Remove rear roof frame paneling	i Do not unscrew screw for belt end fitting if present on 23rd seat row (omit step 1), if present. Loosen D-pillar paneling from C-pillar and guide to bottom along seat belt.		
		S Long wedge	<u>115 589 03 59 00</u>	
5	Remove door sill molding in load compartment	AR68.30-P-4100		
6	Fold rear seat forward	i See Operating Instructions		
7.1	Remove SRS label and unscrew screw behind	Pisk of fracturing!		
		i Only as of VIN A145273, X708319.		
8	Remove screw (1) and spacer sleeve (3) from belt end fitting (2) of rear seat belt	Nm	BA91.40-P-1001-01D	
9	Remove brackets (4) (2 each.) from lining (8)			
10	Open cover (5) and remove			
11	Unscrew screw (6)			
12	Unscrew screw (7)			
13	Remove lining (8)	i As of VIN A145273, X708319 up to VIN A289564, X754619: two clips on inside of paneling in roof area.		
		i Installation: Check clips and replace if necessary. Properly insert height adjuster for seat belt into paneling. Check function Install		

AR68.30-P-4490GH Page 3 of 3

		paneling in edge molding of floor covering	
		S Long wedge	115 589 03 59 00
14	Pull seat belt out of lining		
15	Remove lead from 12V socket	i At right paneling	
16	Install in the reverse order		

Nm Seat belts/belt tensioners

Number	Designation		Model 163 up to 08/99	Model 163 as of 09/99
BA91.40-P-1001-01D	Screw on belt end fitting	Nm	35	35



115 589 03 59 00

Assembly wedge