
## AR54.30-P-6015GH Remove instrument cluster MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

## Steering wheel removed for clarity

3 Upper steering column cover

12 Side covering

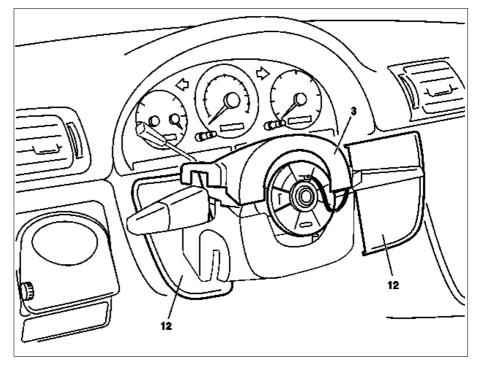


P54.25-2680-06

20.1.97

## Steering wheel removed for clarity


- 4 Clips
- 5 Frames
- 6 Hook
- 7 Lug
- 8 Mount
- 9 Screw
- 10 Spreading clips
- 11 Connector
- 13 Mount
- A1 Instrument cluster

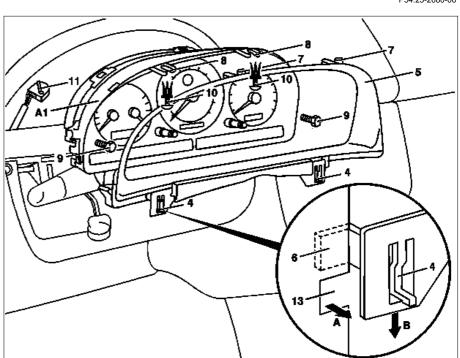

P54.30-0630-06

XX	Remove, Install		
1	Disconnect ground cable of battery	To prevent unintended contact, insulate the ground lead cable lug.	AR54.10-P-0003A
2	Unlock steering wheel and move to its lowest position	i See Operating Instructions	
3	Remove upper steering column cover (3)	<ul> <li>Risk of fracturing! Do not scratch the steering wheel.</li> <li>Only as of VIN A145273, X708319: Loosen clips on the side and front. Gently squeeze the cover together and pull out between the steering wheel and instrument panel.</li> </ul>	
4	Remove side covers (12)	Danger of breaking retaining lugs. Do not damage instrument panel.	

		i Up to VIN A145272, X708318: 3 covers: Remove side covers first. Detach center cove from instrument panel and rotate so that the retaining lugs point upwards. Then pull out to the right. As of VIN A145273, X708319: 2 covers: First remove the right cover, then the left. It is not necessary to detach the connectors. The covers can remain attached to the wiring harness.	
5	Remove frame (5) of instrument cluster	<ul> <li>Long wedge</li> <li>Lift clips carefully, risk of fracture.</li> <li>Push the clips (4) outwards (arrow direction A) and ease the frame down towards the footwell (arrow direction B) until the top of the frame disengages.</li> <li>Installation: Insert the hooks (6) of the frame upwards until the clips snap into place.</li> <li>Installation: Insert the lugs (7) on the frame into the receptacles (8) on the instrument cluster.</li> </ul>	5
6	Unscrew screws (9)		
7	Remove expanding clips (10)		
8	Pull instrument cluster (A1) forwards		
9	Unlock, open and pull off connector (11)		
10	Remove instrument cluster	<ul> <li>Make sure the steering wheel is not scratched.</li> <li>Tilt the upper edge of the instrument cluster towards the steering wheel and move to the right out of the instrument panel.</li> </ul>	
11	Install in the reverse order		
12 🇯 A D	Perform function check Instrument cluster (IC) diagnosis operational check		AD54.30-P-3000A

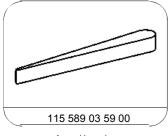

Assembly wedge