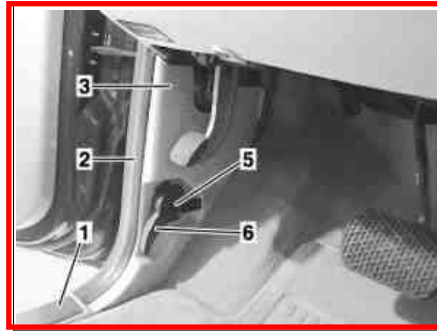
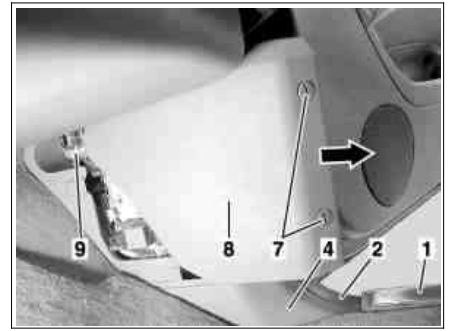


MODELS 163.113 /128 /136 /154 /157 /172 /174 /175



 
 
 
 
 
 
 
- 1 Door sill molding cover
- 2 Door seal
- 3 Driver-side paneling
- 4 Passenger side paneling
- 5 Bolt
- 6 Engine hood release lever
- 7 Arresting mechanism
- 8 Fuse and relay box cover
- 9 Nut



P68.30-2266-01



P68.30-2267-01

 	Remove/install		
1	Remove front door sill molding cover (1)		
2	Unscrew screws from door sill molding on rocker panel	 Only two front screws.	
3	Pull off door seal (2) in the area of driver's side paneling (3) or front passenger's side paneling (4)		
4	Unscrew screw (5) for engine hood release lever (6) on A-pillar	 Driver's side only.	
5	Unhook engine hood cable and remove engine hood release lever (6)	 Driver's side only.	
6.1	Rotate locks (7) on the cover of the fuse and relay box (8) 1/4 revolution counterclockwise into the vertical position	 As of 09.99. Passenger side only.	
7.1	Pull back cover of fuse and relay box (8) (arrow) and remove	 As of 09.99. Passenger side only.	
8.1	Unscrew nut (9)	 As of 09.99. Passenger side only.	
9	Unclip driver's side paneling (3) and front passenger's side paneling (4) and remove	 Lift door sill molding slightly to allow removal.	
10	Install in the reverse order		