
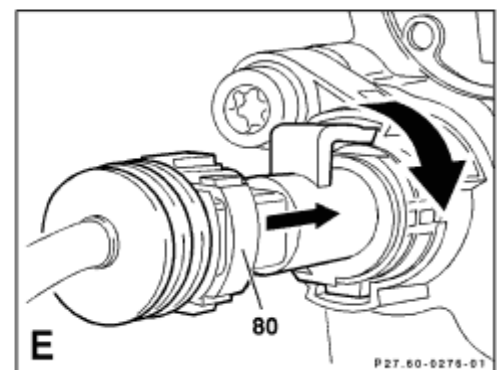
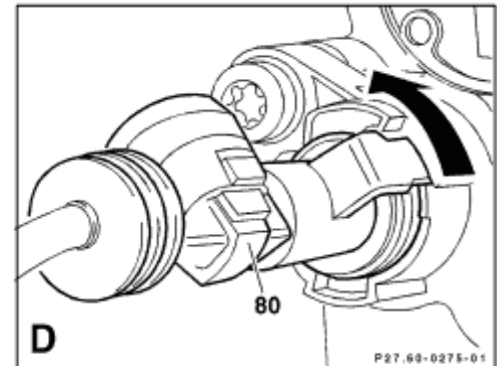
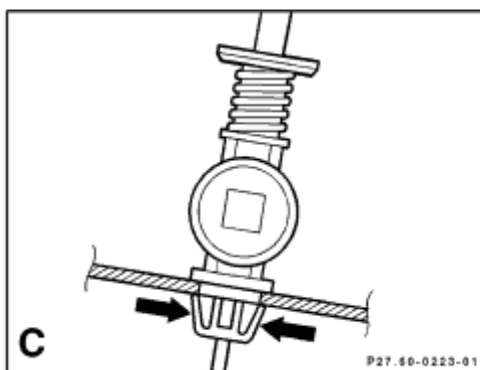
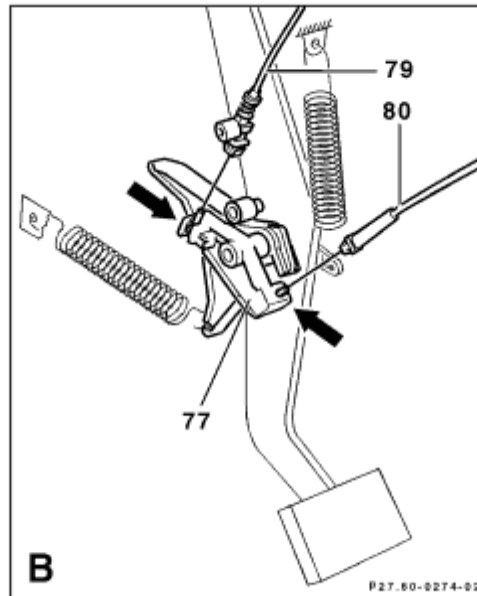


AR27.60-P-1000B

 
 

Removing and installing wire cable for parking lock interlock

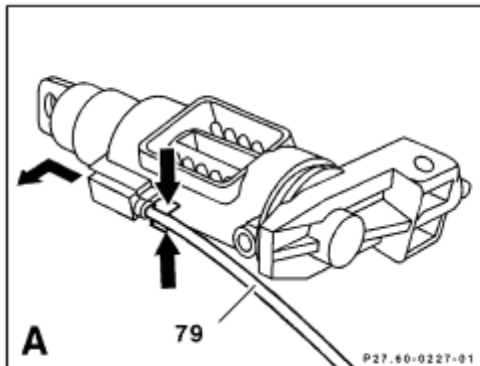

 
2.11.94

## TRANSMISSION 722.66



P27.60-0278-09

	Removing and installing wire cable/steering lock		
1	Remove cover below left of instrument panel		
2	Unhook wire cable/steering lock (79) by pressing in the locking tongues and at the same time pressing (arrows) against the steering lock (figure A)	 <b>Installation:</b> Position key in steering lock in position "1"	
3	Remove stop lamp switch		<a href="#">AR42.10-P-0040GH</a>
4	Unhook wire cable/steering lock (79) at the release lever (77) (arrow) (figure B)		
5	Compress locking device (arrows) and at the same time push the wire cable/steering lock upwards out of the mount on the pedal bearing bracket (figure C)		
6	Remove wire cable/steering lock		
7	Install in reverse order		
8	Adjust wire cables for parking lock interlock		
	<b>Removing wire cable/transmission</b>		
9	Remove cover below left of instrument panel		
10	Pull off entrance strip upwards		
11	Remove A-pillar footwell cover		
12	Unscrew accelerator pedal from floor panel		
13	Remove driver side floor lining complete	 Do not fold up floor carpet, foamed insulating material cracks.	
14	Remove air duct for rear compartment heating		

15	Unhook wire cable/transmission (80) at release lever (77) (arrow) <b>(figure B)</b>		
16	Compress locking device (arrows) and at the same time push the wire cable/transmission upwards out of the mount on the pedal bearing bracket <b>(figure C)</b>		
17	Turn wire cable/transmission (80) counterclockwise and pull off <b>(figure D)</b>	 To install and remove, position selector lever or range selector lever in position "P" and leave in position "P" when wire cable/transmission is removed.  <b>Installation:</b> Attach wire cable/transmission and turn clockwise <b>(figure E)</b>	<a href="#">AR27.60-P-0500-05B</a>
18	Remove rubber boot on tunnel		
19	Open cable straps behind cover on left of tunnel and remove wire cable/transmission	 <b>Installation:</b> Attach wire cable/transmission in the bracket on the jacket tube	
20	Install in reverse order		
21	Adjust wire cables for parking lock interlock		