



P33.20-2035-09

	Remove/Install		
	Notes on self-locking nuts and bolts	All models	AH00.00-N-0001-01A
1	Remove front springs		AR32.20-P-0200GH
2	Remove steering knuckle		AR33.25-P-0400GH
3.1	Remove linkage rod for suspension-control module (95b) from lower right control arm	Vehicles with xenon headlamps.	
4	Detach torsion bar (28) from lower control arm		*BA32.20-P-1002-02G
5	Detach lower control arm (4) from front subframe	Installation: Tighten new nuts slightly. Tighten bolt fully only when vehicle is on its wheels and ready to drive. 	*BA33.20-P-1004-01D
6	Loosen clamped joint at rear of lower wishbone (4) and fold down bearing shell (4d)	Installation: Tighten new nuts slightly. Tighten bolt fully only when vehicle is on its wheels and ready to drive. 	*BA33.20-P-1005-01D
	Inspect		
7	Inspect lower control arm for signs of distortion and corrosion		
8	Install in the reverse order		
9	Perform chassis alignment check		AR40.20-P-0200GH

Front axle torsion strut

Number	Designation	Model Series
BA32.20-P-1002-02G	Bolt, torsion bar to wishbone	NM 68

Wheel location, hub

Number	Designation	Model Series
		163

BA33.20-P-1004-01D	Bolt, lower wishbone at front to front axle carrier	NM	135
BA33.20-P-1005-01D	Bolt, lower wishbone at rear to front axle carrier	NM	30