


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175
with 7.6 L reservoir

Shown on model 163 with headlamp cleaning system


- 1 Washer fluid reservoir
- 2 Bolt
- 5 Pumps
- 6 Grommets
- 10 Cooling module

Arrow headlamp cleaning system pump

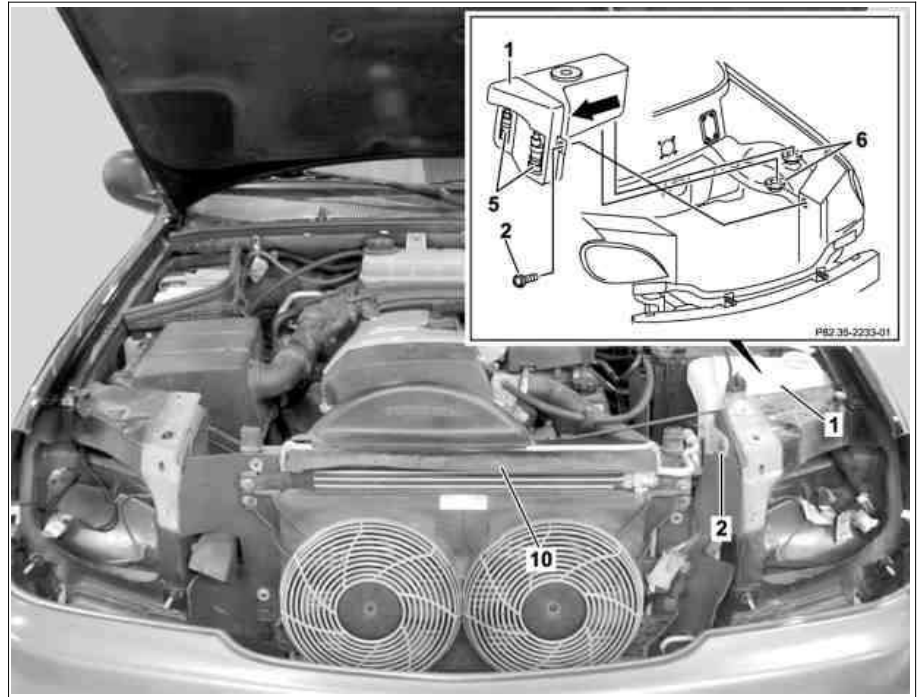

P82.35-2232-06


- 3 Air conditioning system hose
- 4 Clip

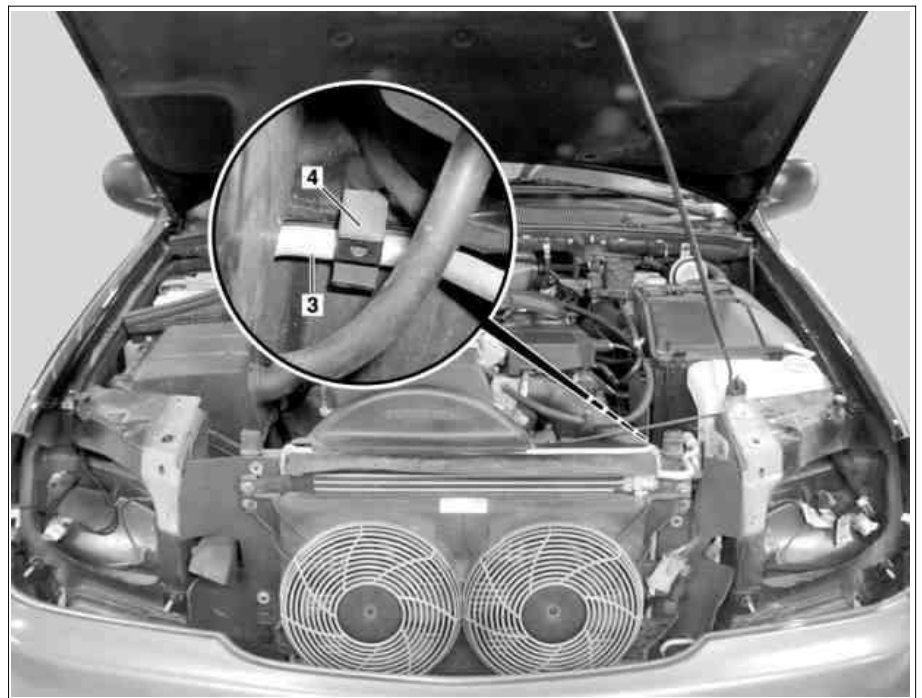

P82.35-2238-06

	Remove/Install		
1	Remove upper frame cross member		AR62.30-P-2300GH
2	Drain the washer fluid reservoir	Manual pump	*210589007100
3	Disconnect connectors and hoses from pumps (5)	Loosen wiring harness from the side of the washer fluid reservoir. If fitted, disconnect plug from washer fluid level indicator switch.	
4	Unscrew bolt (2)		
5	Loosen air conditioning hose (3) from clip (4)		
6.1	Remove covers and locking clips from fuse and relay module	Only Model 163.128.	
7	Detach cooling module (10) from lower grommets		

8	Remove washer fluid reservoir (1)	<p>i Loosen washer fluid reservoir (1) from lower grommets (6). Lift up cooling module with the help of an assistant. Press washer fluid reservoir inwards and pull straight upwards.</p> <p>Installation: Ensure that the washer fluid reservoir (1) is correctly seated in the grommets (6) and side clip.</p>	
9	Install in the reverse order		

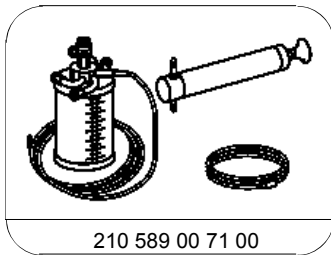

210 589 00 71 00

Hand pump