


- 1 Model 140: Detach exhaust system (only as far as necessary).
- 2 Turn detent eccentric bolt (g) to the left using the Allen wrench (approximately half a turn) and simultaneously push backwards in slot until the spring-loaded detent eccentric (b) engages with the raised section (h) in the holddown clip (d).

slack adjuster is located near the main driveshaft

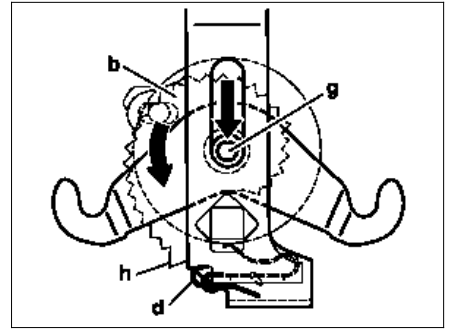

P42.20-0209-01