


- 1 Lift center holddown clip (arrow) using a screwdriver so that the cable slack adjuster sets itself automatically.

slack adjuster is located near the main driveshaft

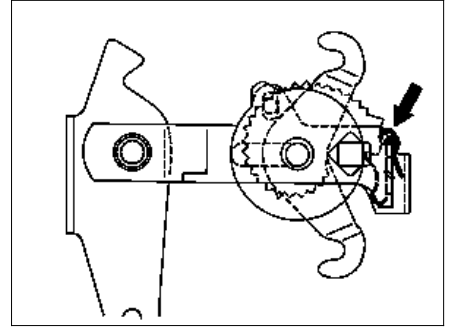

P42.20-0212-01