



MODELS 163.136 /154 /172 as of 1.9.99,
163.113 /128 /157 /174 /175

- 1 Cover
- 2 Unlocking box
- 3 Rear backrest frame
- 4 Rear backrest release cable
- 5 Rear backrest release cable
- 6 Adjuster
- 7 Relay lever
- 8 Spring

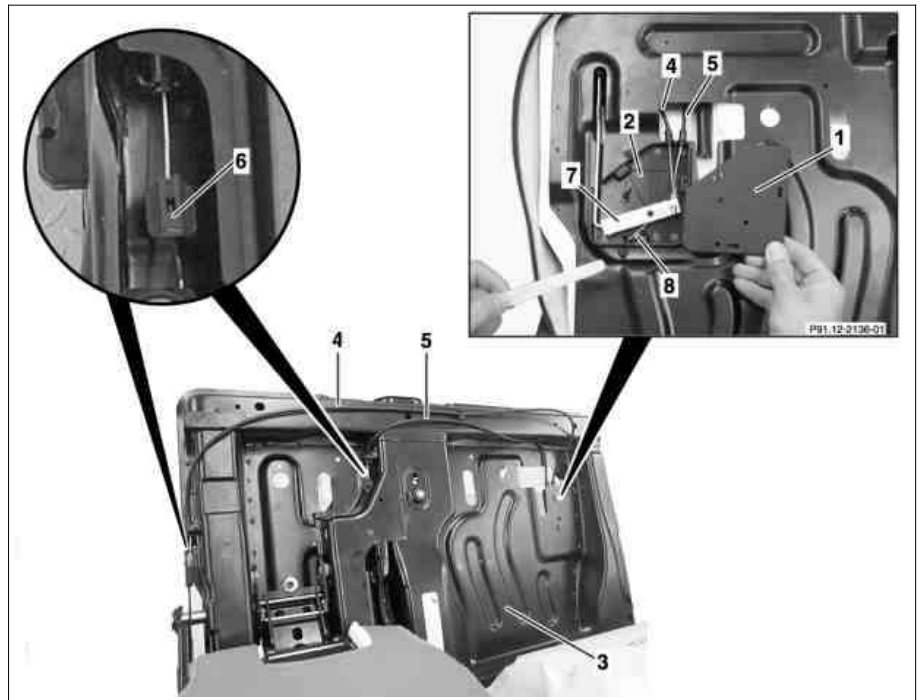

P91.12-2135-06

☒ ☒	Remove/Install		
☑	Torx bit set		*000589011000
1	Remove fold-down rear backrest		AR91.12-P-1720GI
2	Remove rear backrest cushion	i Do not remove rear backrest covering from the rear backrest cushion.	AR91.18-P-1870GI
3	Unhook rear backrest release cable (4, 5) from the adjusters (6)	i Only 1 adjuster is fitted to the 40% rear seat. i Mark adjustment position on the thread. Turn the adjuster counterclockwise until the rear backrest release cables can be unhooked.	
4	Remove cover (1) from unlocking box (2) on the back of the rear backrest frame (3)		
5	Take out relay lever (7) and unhook rear backrest release cable (4, 5) from relay lever	i Installation: Insert spring (8) in relay lever correctly.	
6	Unhook rear backrest release cable (4, 5) from rear backrest frame and remove		
7	Install in the reverse order		

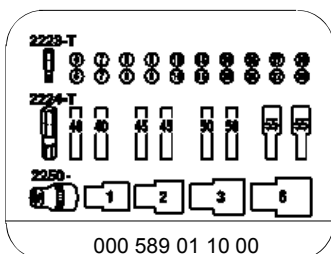

000 589 01 10 00

Torx bit set