


 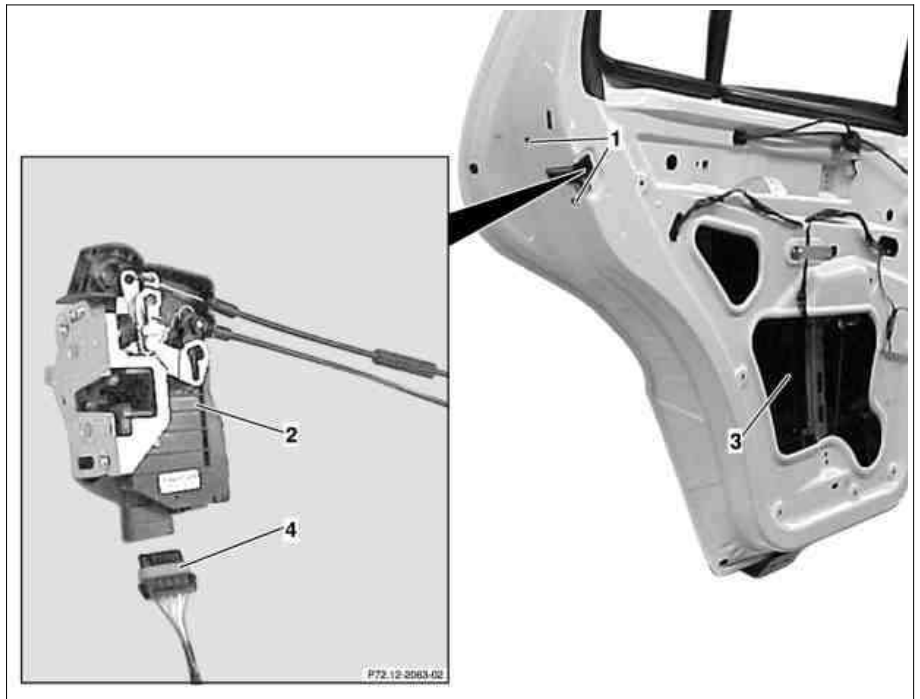


 

 


MODELS 163.113 /136 /154 /157 /172 /174

- 1 Bolts
- 2 Door lock
- 3 Bottom access cover
- 4 Connector




P72.12-2062-06

 	Remove/install		
1	Remove door lining from rear door		AR72.12-P-1010GH
2	Remove exterior door handle on rear door	 Remove bearing bracket through access cover in inner door panel.	AR72.12-P-2410GH
3	Close crank window		
4	Undo plug-in connector (4)		
5	Unscrew screws (1) at door lock (2)	 Hold door lock to prevent it from falling down into the door.   Torx bit set	*BA72.12-P-1001-01C *000589011000
6	Remove door lock (2) through the bottom access cover (3)	 Pull window guide rail gently forward, so that the door lock can be guided behind it.  <b>Installation:</b> position window guide rail correctly.	
7	Install in the reverse order		

 Rear door

Number	Designation	Model Series 163
BA72.12-P-1001-01C	Bolt at door lock	Nm 8

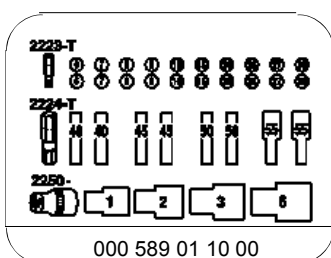

Torx bit set