


ENGINE 628.963 in MODEL 163.128

- 1 Intake hose
- 2 Intake air distribution tube
- 3 Power steering pump supply reservoir
- 4 Left charge air line
- 5 Left charge air pipe
- 6 Right charge air pipe
- 7 Right charge air line
- B2/6 Hot film mass air flow sensor left
- B2/7 Hot film mass air flow sensor right

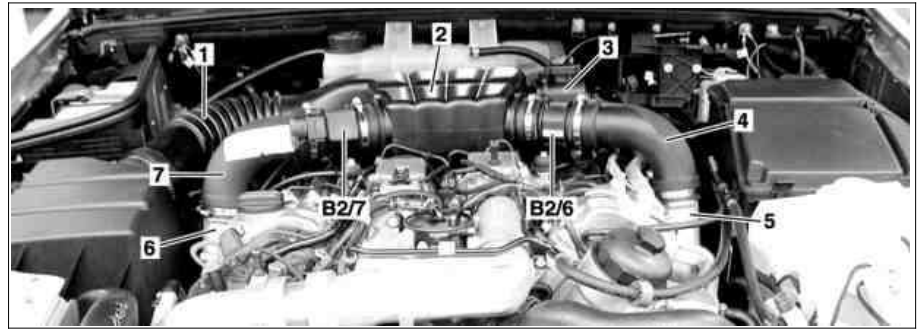

P09.41-2120-04

Modification notes

18.12.03	Extracting oil from power steering pump supply reservoir is not applicable		
----------	--	--	--

☒ ☒	Remove/Install		
1	Open engine hood and move to upright position		AR88.40-P-1000GI
2	Pull engine cover upwards off engine		
3	Detach power steering pump supply reservoir (3) with connected lines from the retaining plate of the intake air distribution tube (2) and place to the side	<p>i Do not disconnect lines from the power steering pump supply reservoir (3). Ensure that the cap on the power steering pump supply reservoir (3) is tightly sealed.</p>	
4	Detach the intake hose (1) from the air cleaner		
5	Detach charge air lines on left and right (4, 7) from the charge air pipes on left and right (5, 6)		
6	Remove the connector at the hot film mass air flow sensors (B2/6, B2/7)		
7	Detach intake air distribution tube (2) with retaining plate and charge air lines on left and right (4, 7) from engine	<p>i Unscrew bolt on the right front of the retaining plate as the last, because the space between the right hot film mass air flow sensor (B2/7) and the bolt on the right front of the retaining plate is too small. While removing, lift intake air distribution tube (2) according to clearance.</p>	
8	Cover up charge air pipe on left and right (5, 6) for protection against foreign matter and dirt		
9	Install in the reverse order		