


MODEL 163

- 1 Inner fender
2 Nut for inner fender

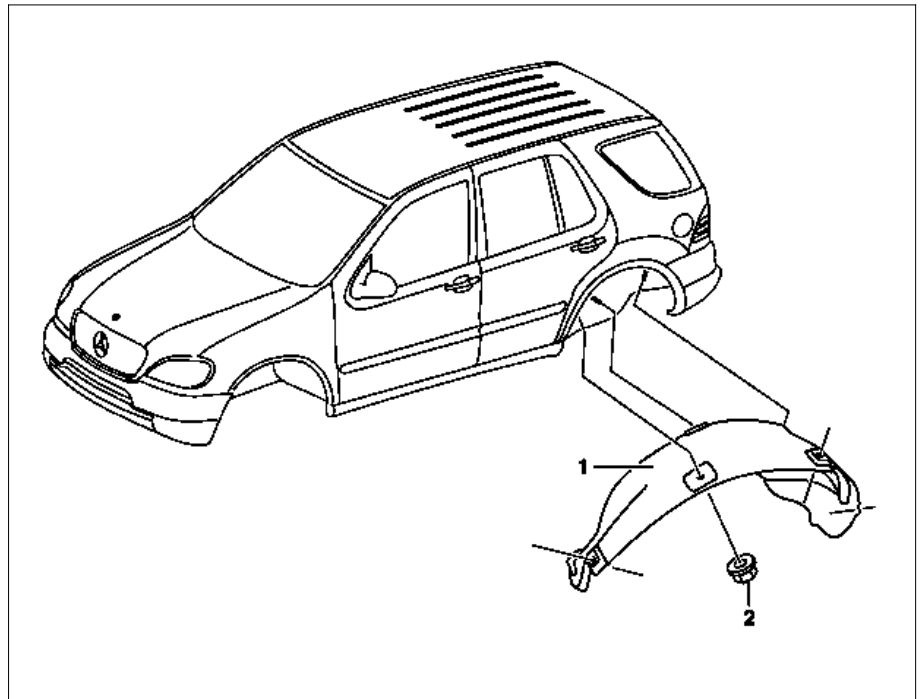

P88.10-0289-06

| ☒ ☒ | Removal, installation | | |
|-----|----------------------------------|--|--|
| 1 | unscrew nut for inner fender (2) | | |
| 2 | Remove inner fender (1) | <p>⚠ Do not damage fender cutout and paint.</p> <p>i Pull front and rear section of inner fender (1) downward, move inner fender away inward and downward, then pull toward outside over wheel.</p> | |
| 3 | Install in opposite order | | |