

Model 163

Please remember that part availability is no longer given for the above-mentioned type of transmitter key.

Central locking:

If the door is locked using the emergency key, then in each case only this door is locked, not the complete central locking system.

i Procedure for locking complete vehicle:

- 1 Switch off ignition.

For vehicles with code 551 (Anti-theft alarm system (ATA)):

When the emergency key is used, function impairments may occur in the anti-theft alarm system (ATA).

To ensure that the vehicle is in a ready-to-drive condition an emergency key with limited functionality is currently available.

- 2 Remove transmitter key.
- 3 Open driver door (all other doors must be closed).
- 4 Remove emergency key from vehicle.
- 5 Operate inside switch for central locking (all doors and liftgate are locked, tank cap remains unlocked).
- 6 Lock driver door using emergency key.

To this end, the **function descriptions** in the WIS: FG 80 for the anti-theft alarm system (ATA), and the information on the emergency key's **mode of operation** in the operator's manual must be observed.

Corresponding information on the available key will be available in the EPC as from Release 01/2017 onwards.

Emergency key leaflet, form	
-----------------------------	--

	OF80.00-P-3000-02A
--	--------------------