


## MODEL 163

- 1 Inner fender  
2 Nut for inner fender

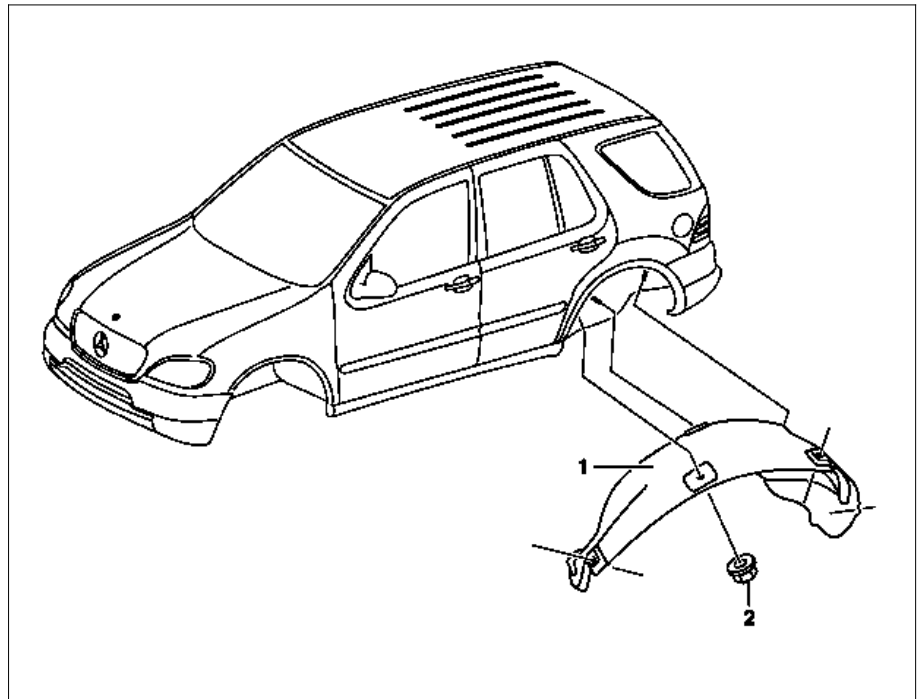

P88.10-0289-06

☒ ☒	Removal, installation		
1	unscrew nut for inner fender (2)		
2	Remove inner fender (1)	<p>⚠ Do not damage fender cutout and paint.</p> <p><b>i</b> Pull front and rear section of inner fender (1) downward, move inner fender away inward and downward, then pull toward outside over wheel.</p>	
3	Install in opposite order		