
AR42.40-P-0816GH Page 1 of 2

AR42.40-P-0816GH	Remove/install ETS/ASR/ESP hydraulic unit	3.2.97
------------------	---	--------

MODEL 163

Connections of traction systems hydraulic unit

DK Pressure circuit
HL To left rear wheel brake
HR To right rear wheel brake
SK Secondary brake circuit
VL To left front wheel brake
VR To right front wheel brake

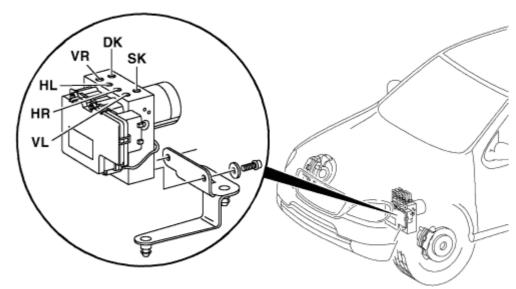

P42.40-0301-05


23 X	Remove/install		
⚠ Danger!	Risk of poisoning from swallowing brake fluid. Risk of injury from skin and eye contact with brake fluid.	Pour brake fluid only into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001- 01A
(Notes on brake fluid	All models	AH42.50-P-0001- 01A
(b)	Notes on repairs to brake system	All models	<u>AH42.00-P-0003-</u> <u>01A</u>
i	Ignition OFF		
1	Remove washer fluid reservoir		
2	Unscrew hydraulic lines from traction systems hydraulic unit	Plug hydraulic lines and connections with blind plugs to prevent brake fluid running out. Label hydraulic line in relation to appropriate connection before unscrewing to prevent mixing up lines and hoses. Installation: Pay attention to the markings when screwing on the hydraulic lines. Do not misconnect hydraulic lines. Trace line routing to the corresponding wheel if necessary.	
		Nm	BA42.40-P-1001- 01A
		Set of plugs	129 589 00 91 00
		Box wrench bit	000 589 75 03 00
		S Box wrench bit	140 589 00 03 00
3	Remove left fender liner		AR88.10-P-1300GH
4	Disconnect 15-pin connector from hydraulic unit	i Release bayonet lock.	
5	Remove the hydraulic unit.	i Unscrew hydraulic unit from	


AR42.40-P-0816GH Page 2 of 2


		retaining plate and remove sideways through the wheelhouse after unclipping the transfer case vent line and unscrewing the retaining bolts for the hydraulic unit. Pull the retaining plate upwards out of the rubber mounts if necessary.	
6	Install in the reverse order	Rinse off any escaped brake fluid with water.	
7	Bleed brake system		AR42.10-P-0010GH
8	Fault memory	Read out and erase fault memory, see Diagnosis Manual, Chassis, Volume 3.	

Nm Acceleration Slip Regulation (ASR)

Number	Designation		Model 163
BA42.40-P-1001-01A	Brake line to ASR / ETS hydraulic unit	Nm	15

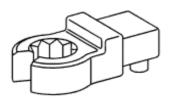

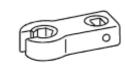

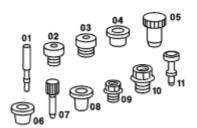

000 589 75 03 00 Box wrench bit 140 589 00 03 00 Box wrench bit 129 589 00 91 00 Set of plugs