

AR46.10-P-0300-01A	Activating steering angle sensor		
--------------------	----------------------------------	--	--

**i**

If the battery is disconnected or the power supply to the steering angle sensor is interrupted the ADS or ESP control module switches to malfunction. The ADS or ESP malfunction indicator lamp (A1e27 or A1e42) come on. It is necessary to reactivate the steering angle sensor to eliminate the malfunction.

### Activating steering angle sensor

1 Start engine and allow to idle.

[Center the Steering Wheel](#)

2 Turn steering wheel from lock to lock

The ADS or ESP malfunction indicator lamp (A1e27 or A1e42) should go out.

[Lock to lock means turn the steering wheel all the way to one end and then to the other and recenter whe steering wheel.](#)

*A1 Instrument cluster*

*A1e17 ABS malfunction indicator lamp*

*A1e41 ESP warning lamp*

*A1e42 ESP malfunction indicator lamp*

*A1e43 EPC malfunction indicator lamp (electronic accelerator)*

