

Item	Designation	Coordi
<u>A16/1</u>	Right knock sensor 1	25L
<u>A16/2</u>	Left knock sensor 2	27L
<u>B2/5</u>	Hot film MAF sensor	9L
<u>B4/3</u>	Fuel tank pressure sensor	72L
<u>B6/1</u>	Camshaft Hall sensor	22L
<u>B11/4</u>	Coolant temperature sensor	24L
<u>B28</u>	Pressure sensor	30L
<u>B40</u>	Oil sensor (oil level, temperature and quality)	32L
<u>C4</u>	Radio interference suppression capacitor	37K 50K
<u>F1</u>	Fuse and relay module	2C 52B 77L
<u>F1f11</u>	Fuse 11	7C
<u>F1f19</u>	Fuse 19	52D
<u>F1f26</u>	Fuse 26	49D
<u>F1f45</u>	Fuse 45	51D
<u>F1k12</u>	Circuit 15 relay	5C
<u>G1</u>	Battery	6J
<u>G3/3</u>	Left O2 sensor upstream TWC [KAT]	64L
<u>G3/3x1</u>	Left O2 sensor upstream TWC [KAT] connector	64K
<u>G3/4</u>	Right O2 sensor upstream TWC [KAT]	66L
<u>G3/4x1</u>	Right O2 sensor upstream TWC [KAT] connector	66K
<u>G3/5</u>	Left O2 sensor downstream TWC [KAT]	68L
<u>G3/5x1</u>	Left O2 sensor downstream TWC [KAT] connector	68K
<u>G3/6</u>	Right O2 sensor downstream TWC [KAT]	70L
<u>G3/6x1</u>	Right O2 sensor downstream TWC [KAT] connector	70K
<u>L5</u>	Crankshaft position sensor	29L
<u>M16/6</u>	Throttle valve actuator	34L
<u>M16/6m1</u>	Actuator motor	34K
<u>M16/6r1</u>	Throttle valve actual value potentiometer	35J
<u>M16/6r2</u>	Drive actual value potentiometer	35J
<u>M16/6r3</u>	Actual value potentiometer (sliding contact 1)	34H
<u>M16/6r4</u>	Actual value potentiometer (sliding contact 2)	33H
<u>M33</u>	AIR pump	51L
<u>N3/10</u>	ME-SFI [ME] control module	10A 20A 30A 40A 50A 60A 71A
<u>N10</u>	All-activity module	4A
<u>N15/3</u>	ETC control module	73F
<u>S2</u>	Starter switch	3L

<u>T1/1</u>	Cylinder 1 ignition coil	38L
<u>T1/2</u>	Cylinder 2 ignition coil	40L
<u>T1/3</u>	Cylinder 3 ignition coil	41L
<u>T1/4</u>	Cylinder 4 ignition coil	43L
<u>T1/5</u>	Cylinder 5 ignition coil	44L
<u>T1/6</u>	Cylinder 6 ignition coil	45L
<u>T1/7</u>	Cylinder 7 ignition coil	47L
<u>T1/8</u>	Cylinder 8 ignition coil	48L
<u>W11/3</u>	Ground (engine - left side)	37G 50G 52G
<u>W16</u>	Ground (component compartment)	37F 62E
<u>W16/4</u>	Ground (output ground - component compartment - right)	6L
<u>X4/37</u>	Terminal block (circuit 30)	4G
<u>X11/4</u>	Data link connector	78E
<u>X12/3</u>	Terminal block (circuit 30, 15, 31, 3-pin)	5D
<u>X22</u>	Engine compartment and engine connector	7F 49F 64E
<u>X33/19</u>	Engine control module programming voltage connector	75E
<u>Y22/6</u>	Variable intake manifold switchover valve	59L
<u>Y27</u>	EGR [ARF] switchover valve	58L
<u>Y32</u>	Air pump switchover valve	61L
<u>Y58/1</u>	Purge control valve	62L
<u>Y62</u>	Injectors (LH-SFI, HFM-SFI, PEC [LH, HFM, PMS])	17L
<u>Y62y1</u>	Fuel injector cylinder 1	13K
<u>Y62y2</u>	Fuel injector cylinder 2	14K
<u>Y62y3</u>	Fuel injector cylinder 3	15K
<u>Y62y4</u>	Fuel injector cylinder 4	16K
<u>Y62y5</u>	Fuel injector cylinder 5	17K
<u>Y62y6</u>	Fuel injector cylinder 6	18K
<u>Y62y7</u>	Fuel injector cylinder 7	20K
<u>Y62y8</u>	Fuel injector cylinder 8	21K
<u>Z3/29</u>	Circuit 15 connector sleeve (fused)	38F 48F
<u>Z7/35</u>	Circuit 87 M1e connector sleeve	12F 12H
<u>Z7/36</u>	Circuit 87M2e connector sleeve	58G
<u>Z50/5</u>	Cockpit circuit 30 connector sleeve	2G
<u>Z50/9</u>	Cockpit connector sleeve (circuit 15 II)	1G
<u>Z51/3</u>	Interior connector sleeve (CAN-High 2)	74K
<u>Z51/4</u>	Interior connector sleeve (CAN-Low 2)	75K

