


Transmission 722.6/9
Torque converter removed

Modification notes


| | | | |
|------------|--|------------------|--|
| 12.06.2013 | Drift 722 589 00 15 00 special tool replaced by drift 722 589 16 15 00 | Operation step 2 | |
|------------|--|------------------|--|

- 01 Drift
- 1 Radial shaft seal
- 2 Oil pump housing
- 3 Transmission

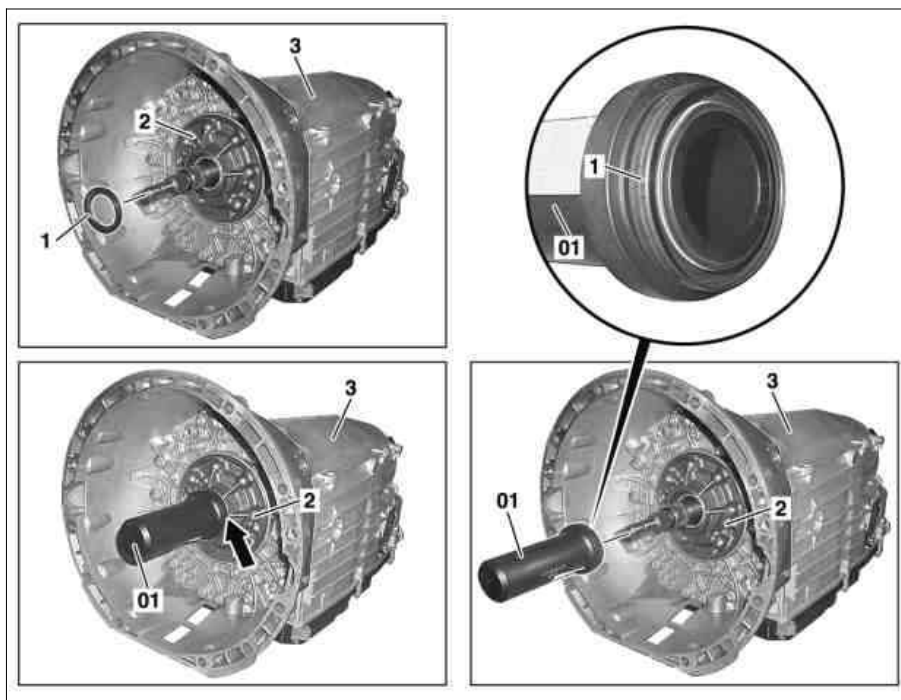

P27.57-2004-06

| | | | |
|---|---|--|--|
| ☒ | Remove | | |
| 1 | Lever radial shaft sealing ring (1) out of oil pump housing (2) | ⚠ Do not damage seat of radial shaft sealing ring (1). Otherwise oil loss and therefore damage or destruction of the transmission (3) may occur. | |
| ☒ | Install | | |
| 2 | Install radial shaft sealing ring (1) flush using drift (01) | <ul style="list-style-type: none"> i Replace radial shaft seal (1). i Coat radial shaft sealing ring (1) between lips with multipurpose paste. Multi-purpose paste ☑ Drift | <ul style="list-style-type: none"> *BR00.45-Z-1009-06A *722589161500 |

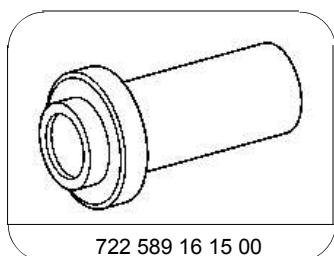

Drift

Repair materials

| Number | Designation | Order number |
|--------------------|---------------------|---------------------|
| BR00.45-Z-1009-06A | Multi-purpose paste | A 000 989 80 51 |