

Item	Designation	Cool
<u>A10</u>	Left SBE	46K
<u>A2/31</u>	Rear bumper antenna	50L
<u>A2/31x1</u>	Rear bumper antenna connector	50H
<u>A2/49</u>	CTEL/GPS roof antenna	55L
<u>A2/56</u>	Radio and navigation unit	24L 44L 56E 58A
<u>A35/8</u>	Tele Aid (emergency call system) transmitter/receiver control module	18A 28A 38A 48A 56A
<u>B25</u>	Hands-free microphone	39L
<u>B25x1</u>	Hands-free microphone connector	38J
<u>F1</u>	Fuse and relay box	2B 12B
<u>F1f10</u>	Fuse 10	9C
<u>F1f8</u>	Fuse 8	10C
<u>G1</u>	Battery	6H
<u>H4/48</u>	Tele Aid speaker	48L
<u>H4/48x1</u>	Tele Aid speaker connector	47K
<u>N10</u>	All Activity Module (AAM)	6A 30L
<u>N10/1</u>	Signal pickup and activation module (SAM), left front	46L
<u>N2/7</u>	Restraint system control module	29L
<u>N47</u>	Traction system control module	42L
<u>N96</u>	Frequency change-over control module	10L
<u>S139</u>	Roof operating unit switch module	34L
<u>S139s2</u>	Tele Aid switch	32K
<u>S139s3</u>	Info and breakdown service switch	37K
<u>S2</u>	Starter switch	5L
<u>S88/9</u>	Liftgate switch, Tele Aid	27L
<u>U331</u>	Valid for CD changer and CTEL with D2B	24H
<u>W16/4</u>	Ground (output ground - component compartment - right)	7L
<u>W19</u>	Ground (right front seat crossmember)	21L
<u>W29/2</u>	Ground (right A-pillar)	13L
<u>W8</u>	Ground (liftgate)	27E
<u>X11/4</u>	Diagnostic test clutch	19L
<u>X12/12</u>	Circuit 30 terminal block at relay module 1	5E
<u>X12/13</u>	Circuit 15 terminal block at relay module 1	6E
<u>X12/14</u>	Circuit 31 terminal block at relay module 1	7E
<u>X18</u>	Interior/taillamp harness connector (cockpit)	18D
<u>X18/1</u>	Interior/tailgate connector	27D
<u>X18/2</u>	Interior/roof connector	32F 38F

<u>X25/2</u>	Engine compartment/interior compartment connector	41F
<u>X39/37</u>	CTEL separation point	10H
<u>X39/39</u>	CTEL connector	51E 56E
<u>X4/37</u>	Terminal block (circuit 30)	5G
<u>Z50/17</u>	Diagnostic connector sleeve (cockpit)	18F
<u>Z50/5</u>	Circuit 30 connector sleeve (cockpit)	4G
<u>Z50/8</u>	Circuit 15R connector sleeve (cockpit)	3G
<u>Z51/15</u>	Interior connector sleeve, radio and CTEL, circuit 31	11H
<u>Z52/1</u>	Circuit 31, IV connector sleeve (interior) right front seat	21F
<u>Z52/9</u>	Backup lamp circuit connector sleeve (interior)	46F
<u>Z53/16</u>	Connector sleeve in interior, circuit 30, Tele Aid	15F
<u>Z53/17</u>	Connector sleeve in interior, wake-up signal D2B	24F
<u>Z53/18</u>	Interior connector sleeve, left rear speed sensor	43D
<u>Z53/20</u>	Control module connector sleeve, frequency switchover/Tele Aid	8G
<u>Z55/1</u>	Circuit 31 connector sleeve (liftgate)	26H
<u>Z87/17</u>	Microphone ground connector sleeve	38D
<u>Z87/18</u>		39D

