AR82.30-P-6910GH MODEL 163

.

- 1 Cover
- 2 Wiper arm nut
- 3 Wiper arm in park position




P82.30-0350-04

XX	Removal, installation		
⚠ Danger!	Injury hazard from pinching and crushing, in extreme cases extremities can even be cut off when caught in windshield wiper mechanism.	Always remove ignition key before working on windshield wiper mechanism.	AS82.30-Z-0001-01A
1	Open cover (1)	i Wiper motor must be in park position, if necessary \downarrow	
		move wiper motor to park position	AR82.30-P-6800-01E
2	Unscrew nut on wiper arm (2)	Caution, do not damage washer nozzle	
		Nm	*BA82.30-P-1001-01C
3	Remove wiper arm (3)	\fbox{i} Pivot wiper arm back and remove, if necessary \downarrow	
		3	*001589383300
4	Reinstall in opposite order	i When installing: Attach wiper arms so that wiper arm points toward left (driver's side)	

Nm Wiper

Designation	Model 163
Nut for rear window wiper arm Nr	n 15

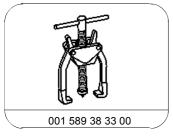

Puller