


AR54.30-P-6341GH

Removing and installing outside temperature indicator sensor

21.1.97

MODEL 163 with CODE (240a) outside temperature indicator

B14 Outside temperature indicator
temperature sensor
X67 Outside temperature indicator
connector (2-pin)

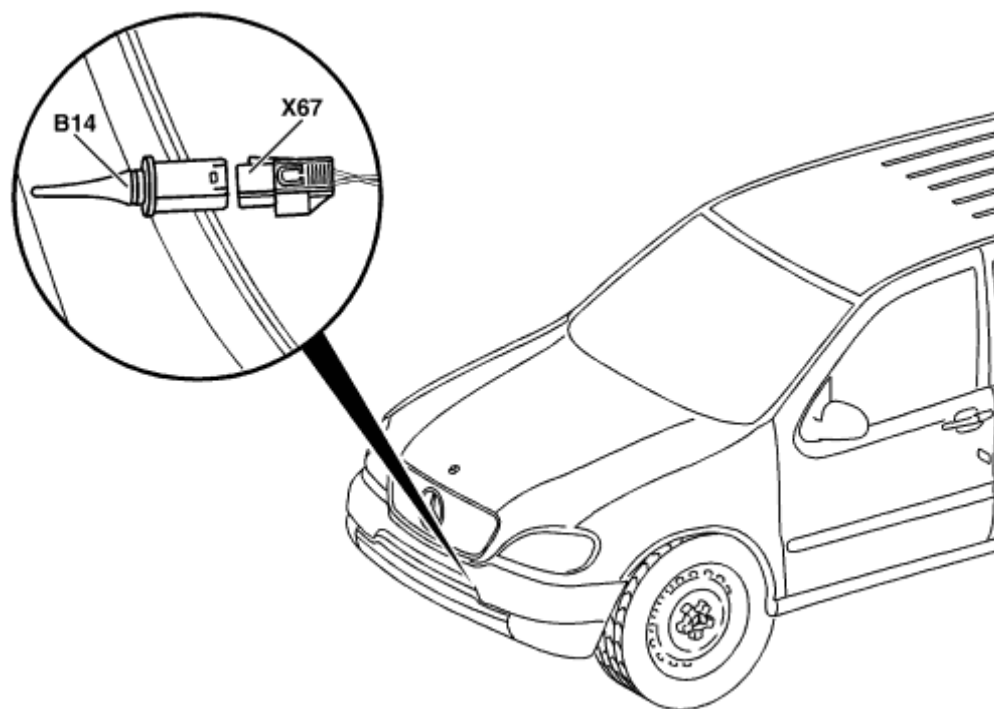

P54.30-0633-06

| ☒ ☒ | Removing, installing | | |
|-----|--|---|--|
| 1 | Open engine hood and position upright | | |
| 2 | Pull outside temperature indicator temperature sensor (B14) out of mount in bumper | <p>i Installation: Insert temperature sensor in the mount the in bumper until it locks in position.</p> | |

| | | | |
|---|--|--|--|
| 3 | Disconnect outside temperature indicator connector (2-pin) (X67) and remove outside temperature indicator temperature sensor | | |
| 4 | Install in reverse order | | |
| 5 | Carry out function test | | |