





AR88.40-P-3200GI	Remove/install engine hood lock	9.4.99
------------------	---------------------------------	--------

MODEL 163.154 /172 #A as of 145273,
163.154 /172 #X as of 708319,
163.157 /174 /175

- 1 Screws
- 2 Engine hood lock bottom section
- 3 Engine hood control cable
- 4 Electrical connector
- 5 Screws
- 6 Engine hood lock top section

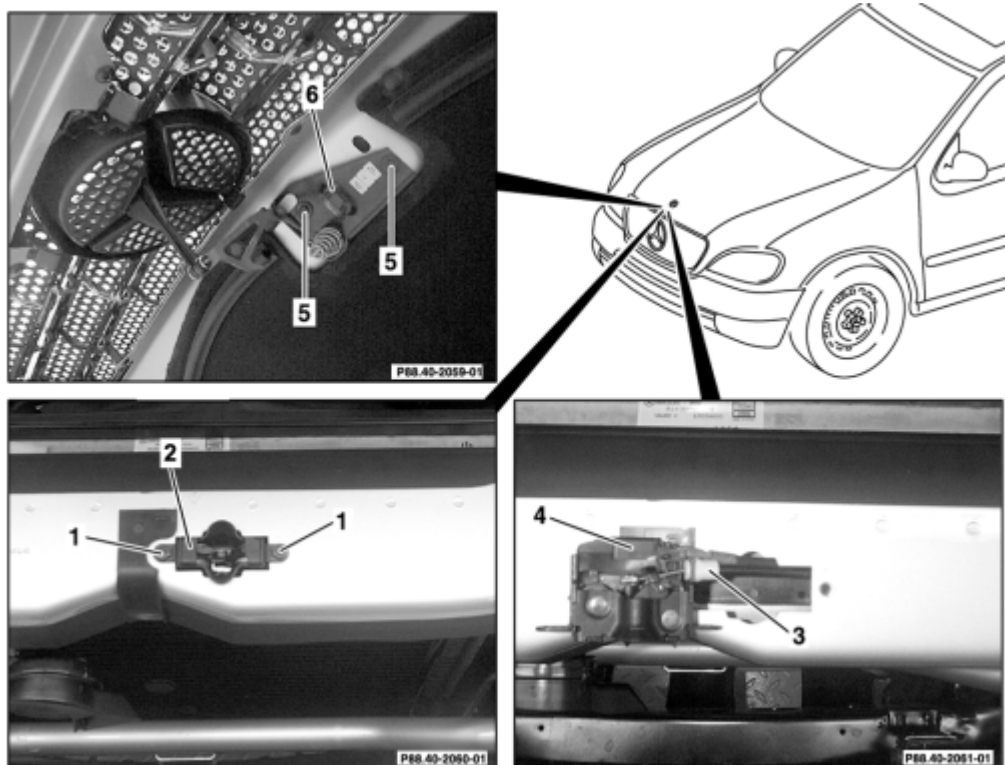

P88.40-2058-06

 	Removing and installing		
1	Open engine hood and raise to vertical position		AR88.40-P-1000GI
2	Unscrew screws (1) and remove engine hood lock bottom section (2) upward	Nm	BA88.40-P-1003-01C
3.1	Disconnect electrical connector (4) from engine hood lock bottom section (2)	i Only when equipped with ATA .	
4	Unhook engine hood control cable (3) from engine hood lock bottom section (2)	i Pull out engine hood control cable slightly.	
5	Remove engine hood lock bottom section (2)	i Installation: Ensure that engine hood control cable is routed carefully.	
6	Unscrew screws (5) and remove engine hood lock top section (6)	i Mark installation position for engine hood lock top section on engine hood.	
		Nm	BA88.40-P-1004-01C
7	Install in the reverse order		
8	Check alignment of engine hood	i If necessary: ↓	
		Adjust engine hood	AR88.40-P-3020GH
9	Lubricate engine hood lock		
	Lubricate hood lock, safety hook and hinges		AP88.40-P-8821GH
10	Perform function check		
11	Check function of safety hook	i For this purpose, close engine hood, unlock and check arrest on radiator cross member.	

Nm Engine hood

Number	Designation		Model 163
BA88.40-P-1003-01C	Screw for engine hood lock on radiator cross member	Nm	12
BA88.40-P-1004-01C	Screw for engine hood lock top section on engine hood	Nm	12