


MODEL 163.136 /154 /172 #A as of 145273,  
163.136 /154 /172 #X as of 708319,  
163.113 /128 /157 /174 /175

- 1 Gas pressure strut  
2 Fuse

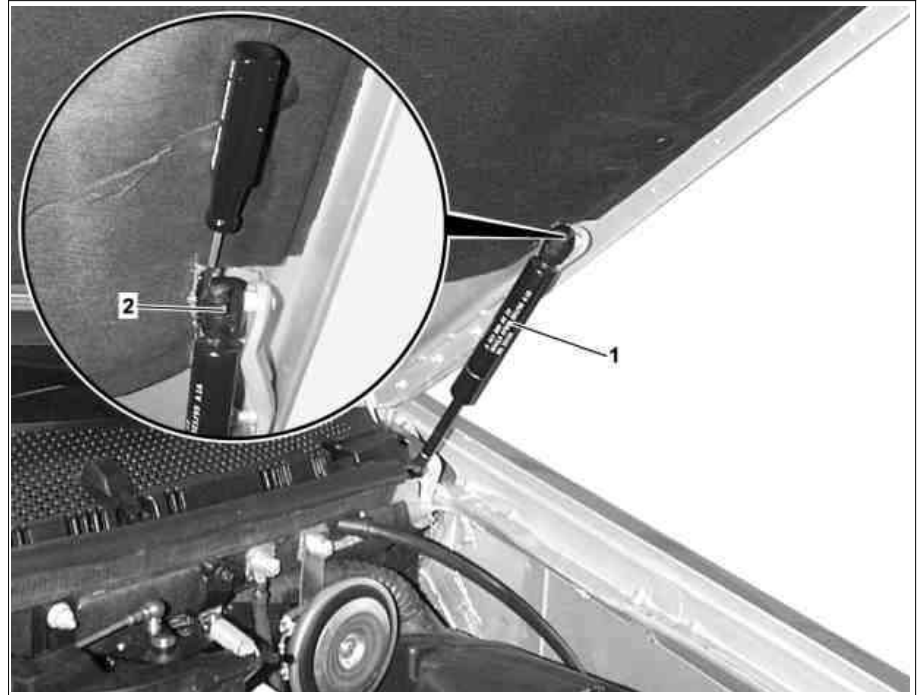

P88.40-2063-06

☒ ☒	Remove, Install		
1	Open engine hood		
2	Secure engine hood		
3	Lift retainer (2) on top of gas-operated strut (1) and detach gas-operated strut at the top	⚠ Risk of breakage. Do not remove the retainer otherwise the preload will be lost.	
4	Lift retainer on bottom of gas-operated strut and remove gas-operated strut (1) <b>Risk of injury</b> due to drilling gas-filled equipment or components (gas filling not flammable) Degas and drain gas pressure strut	ⓘ When replacing gas pressure strut: ↓ Wear safety goggles and face mask.	AS00.00-Z-0006-01A OS00.00-P-1001-01A
5	Install in the reverse order		